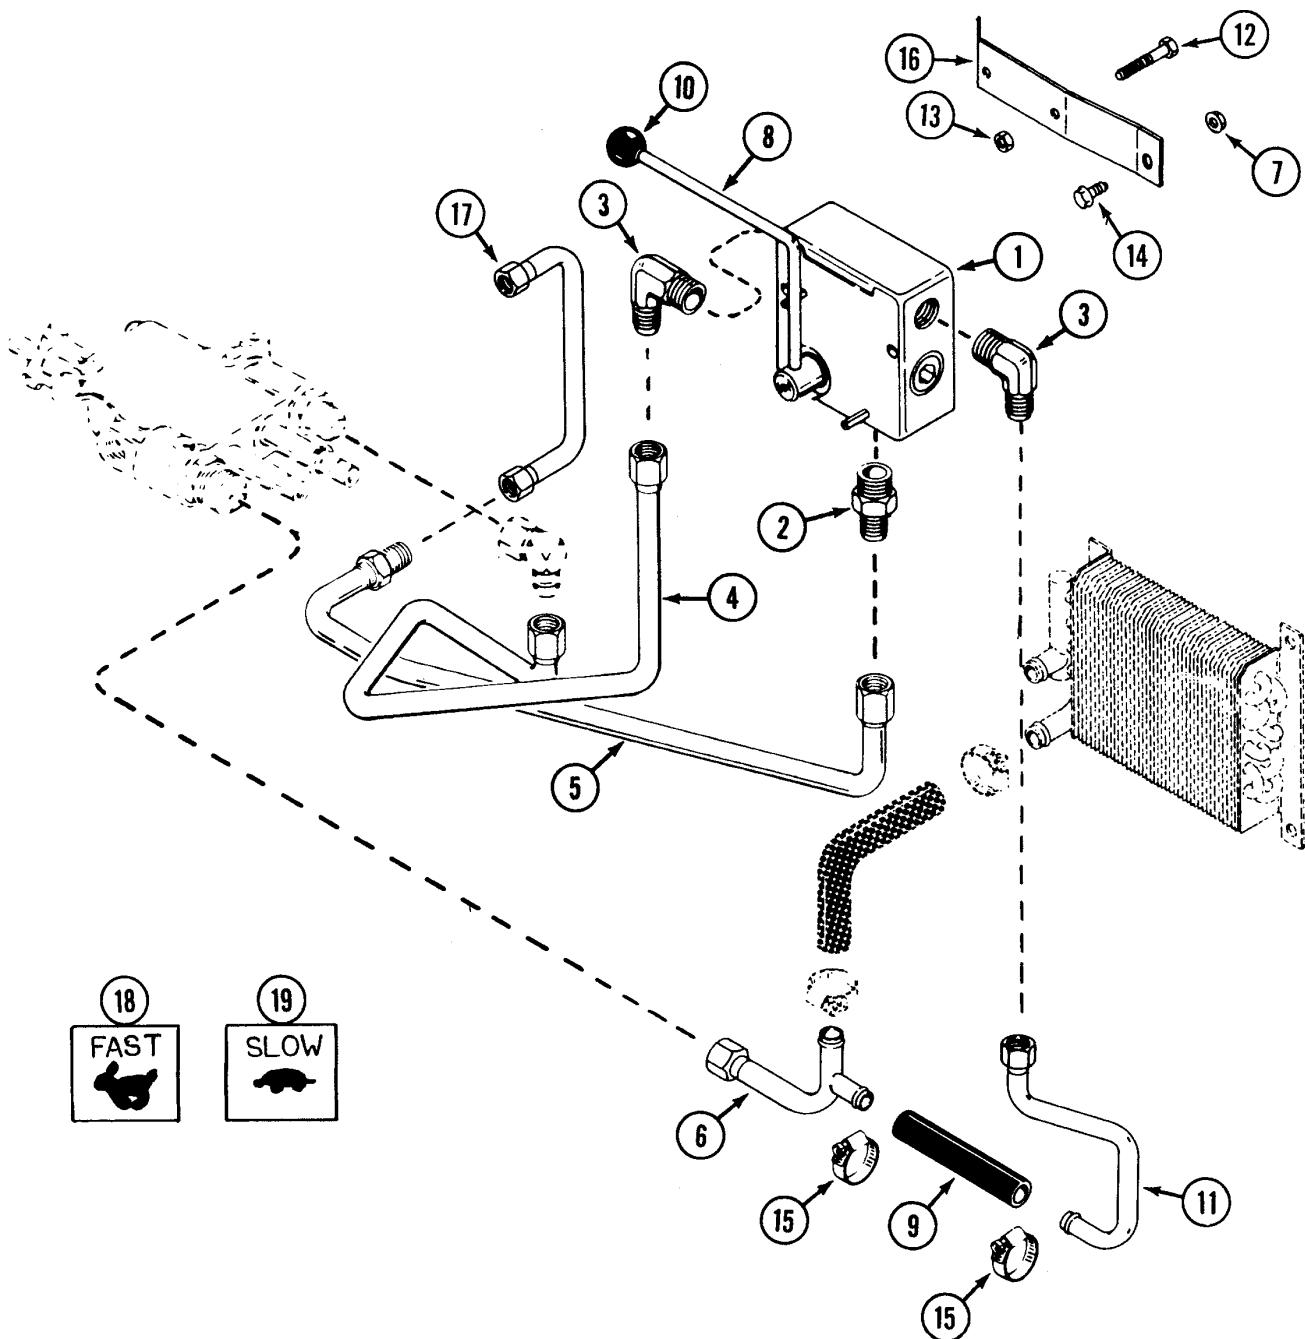


INDEX**HFC34E FLOW CONTROL**
Use with HP34 and HP34A PTO Kits

INDEX**HFC34E FLOW CONTROL**
Use with HP34 and HP34A PTO

REF.	PART NO.	DESCRIPTION	REQ'D
1	C23618	VALVE - flow control	1
2	218-445	FITTING - 5/8" tube x 7/8" - 14.....	1
3	218-485	FITTING - 90° 5/8" tube x 7/8" - 14	2
4	C42483	TUBE - flow valve to travel valve	1
5	C42531	TUBE - flow valve to PTO valve.....	1
6	C36846	TUBE - travel valve to heat exchanger	1
7	131-934	NUT - 1/4" - 20 flange lock	2
8	C36848	LEVER - control	1
9	C36849	HOSE - return 5/8"	1
10	C28251	KNOB - lever	1
11	C36850	TUBE - flow valve to return	1
12	113-15	BOLT - 1/4" - 20 x 2-1/4"	2
13	131-1180	NUT - lock 1/4" - 20	2
14	121-21	BOLT - 1/4" - 20 flange lock	3
15	214-254	CLAMP - hose	4
16	C36853	BRACKET - mounting	1
17	C42485	TUBE - flow valve to PTO valve.....	1
18	C33220	DECAL - "fast"	1
19	C33219	DECAL - "slow"	1
	C33221	TRIM - panel (tower side) not shown	1
	218-5229	FITTING - 90° swivel 5/16" tube (install to tee fittings on travel valve when 3 pt hitch is used)	2