
To Remove/Attach Case Ingersoll N46 Mower Deck

Step 2. Start engine

and raise deck with

Lift Links.

Home Made Deck Ramps and Anchor Rods

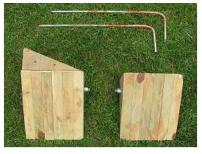

Step 1. Decrease Belt tension and remove PTO Belt.



Step 3. Disconnect mounting (Mule) bracket by releasing Snap-Fast pins while deck is suspended by Lift Links.



Step 4. Lower deck to ground by completely lowering lift arms.



Step 5. Shut off engine and disconnect Right and Left Lift Links.



Step 8. Insert Anchor Rods through deck axle on both sides and into ground to hold deck from sliding on grass.



Step 6. Place Deck Height Selector in "L" or lowest position.



Step 7. Place Deck Ramps behind front tires and against front of deck on both sides.





Step 9. Start engine and slowly back over deck in Reverse.







casecoltingersoll.com