



**Model 118
Compact Tractor**

Ser. 9666 572

Parts Catalog A1227

Yoder Equip & Service
1 mile South of Jennerstown on Rt 985
Phone # 629-6505

casecollectorsoll.com

U.S. PRICE 75 CENTS

CASE MODEL 118 COMPACT TRACTOR

Parts Catalog No. A1227

Hi-Liter 7-75 2500 PRINTED
IN
U.S.A.

NOTE: This catalog replaces the previous issue - 1227 -
which is obsolete and should be discarded.



CASE MODEL 118 COMPACT TRACTOR



ENGINE MODEL, SERIAL AND
SPECIFICATION NUMBER



TRACTOR MODEL DESIGNATIONS	ENGINE MODEL DESIGNATIONS
118 TRACTOR	C19070

GENERAL INFORMATION

Indexes

This Parts Catalog is arranged for easy identification of Genuine CASE Service Parts. An alphabetical index is provided at the front of this Catalog to locate the major groups or assemblies. A numerical index at the rear of the Catalog gives the part numbers and the pages on which they are described.

Illustrations

All parts are illustrated in "Exploded Views" which show the individual parts in their normal relationship to each other. Reference numbers are used in the illustrations. These numbers correspond to those in the "Reference Number" column and are followed by the part number, description and quantity required.

Orders

Orders should plainly specify correct part number, full description, quantity required, machine model and engine model, machine and engine serial numbers, method of shipment and shipping address.

Changes

When changes to the machine make it necessary, revised pages for this book will be issued. The revised pages will be issued with the same page number as those they replace and the "issue" number and date will be advanced.

It is imperative that revised Parts Book pages be inserted into their respective Parts Books as soon as received. Failure to do so will lead to confusion and defeat the purpose of the book.

Indented Description

Indented parts in the descriptive list are a part of the preceding assembly or sub-assembly. The quantity shown in the "Number Required" column is the number of parts used on a machine except where parts are indented in descriptive list. In this case the quantity shown is the number required for the preceding assembly or sub-assembly.


REF.	PART NO.	DESCRIPTION	REQ'D
	A 55159	CYLINDER ASSY - rear steering	1
28	A 56208	SOCKET ASSY - rear cylinder	1
29	A 55956	PLUG - adjusting, socket assy	1
30	A 55957	SEAT - socket ball	2
31	A 56210	SPRING - socket	1
32	A 56209	SEAT - socket spring	1
33	G 45175	CLAMP ASSY - socket assy	1
	16- 836	BOLT - 1/2" x 2-1/4" N.F.hex.	1
34	132- 104	PIN - cotter, 3/16" x 3"	1
35	A 55889	STUD - ball, socket & cylinder	2
36	13- 410	BOLT - 1/4" x 5/8" N.C., hex.	4
37	92- 4	LOCKWASHER - 1/4" SAE	4

ALPHABETICAL INDEX ENGINE SECTION

Air Cleaner	11	Flywheel	7
Battery	31	Fuel Strainer	11
Breather, Crankcase	7	Fuel System	11
Camshaft	5	Gasket Kits	9-13
Carburetor	11-13	Governor	7
Connecting Rod	5	Muffler	7
Crankshaft	5	Oil Pan	5
Cylinder Block	5	Piston	5
Cylinder Head	7	Points, Breaker Contact	31
Electrical System	31-33	Spark Plug	9
Engine Block & Attaching Parts	5-7-9	Starter	33
Exhaust System	7	Tank, Fuel	11
Filter, Breather	11	Throttle Linkage	11
		Valves	5

BASIC TRACTOR SECTION


Axle, Front	21	Hydraulics	25
Axle, Rear	27	Implement Lift	29
Baffles & Shrouds	7-9	Model G14 Weight Box	15
Brakes	23	Model J6 Headlamp Kit	37
Decals	35	Plate, Engine Mounting	13
Electrical System	31-33	PTO Clutch	29
Fenders	17	Seat, Operator's	17
Frame	15	Steering Wheel & Gear	19
Grille	15	Tool Tray	15
Hitch	15	Transmission	27

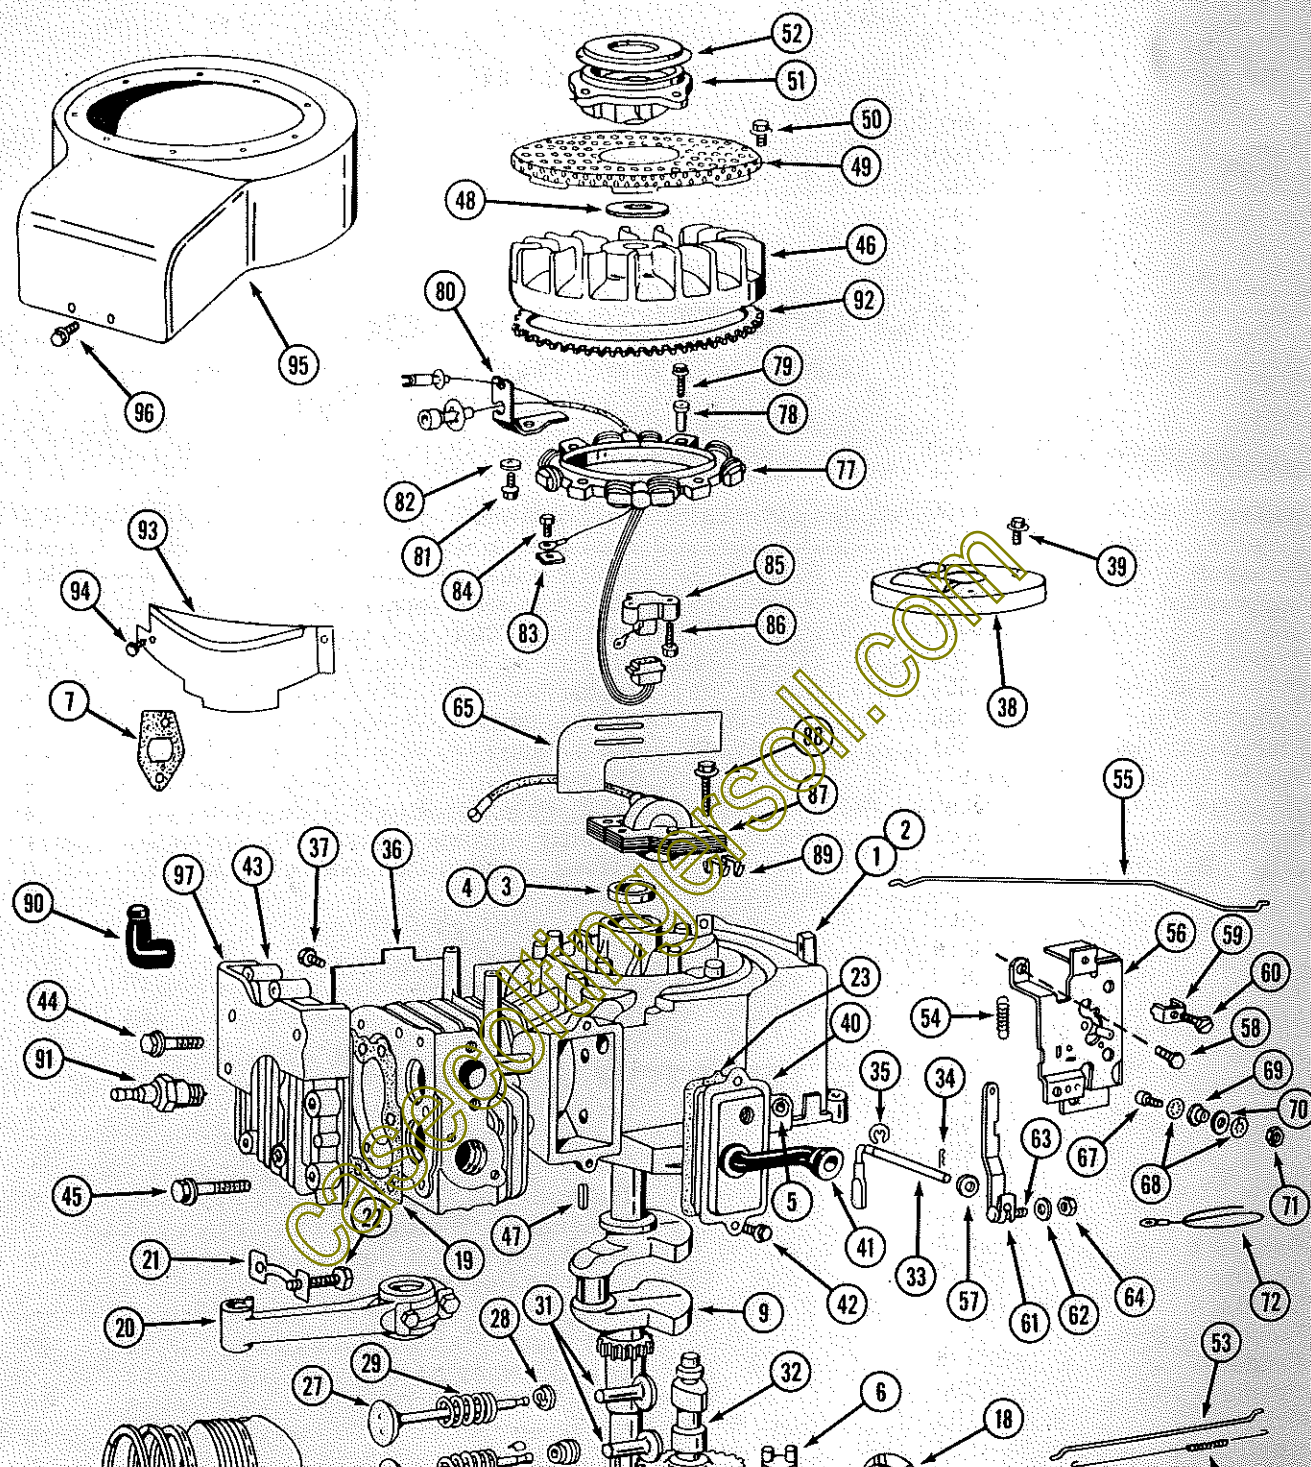

CASE MODEL 118 COMPACT TRACTOR


C19070 ENGINE

REF.	PART NO.	DESCRIPTION	REQ'D
1	BR 390640	BLOCK ASSEMBLY - short	1
2	BR 390380	BLOCK - cylinder, stripped	1
3	BR 295962	BUSHING - cylinder	1
4	BR 294606	SEAL - oil	1
5	BR 230927	BUSHING - governor shaft	1
6	BR 66768	PLUG - oil filler	1
7	BR 270538	GASKET - carburetor mtg.	1
8	221- 13	PLUG - pipe, oil drain	1
9	BR 261038	CRANKSHAFT	1
10	BR 298616	OIL PAN ASSEMBLY	1
11	BR 295963	BUSHING - oil pan	1
12	BR 298923	SEAL - oil	1
13	BR 27750	GASKET - oil pan 1/64"	1
14	BR 93585	SCREW - oil pan mtg.	4
15	BR 390347	PISTON ASSEMBLY - standard	1
15	BR 390348	PISTON ASSEMBLY - .010 oversize	1
15	BR 390349	PISTON ASSEMBLY - .020 oversize	1
15	BR 390350	PISTON ASSEMBLY - .030 oversize	1
16	BR 299569	RING SET - standard	1
16	BR 299570	RING SET - .010 oversize	1
16	BR 299571	RING SET - .020 oversize	1
16	BR 299572	RING SET - .030 oversize	1
17	BR 295840	PIN ASSEMBLY - piston, standard	1
17	BR 295841	PIN ASSEMBLY - piston, .005 oversize	1
18	BR 298614	BRACKET ASSEMBLY - governor gear & oil slinger	1
19	BR 270430	GASKET - cylinder head	1
20	BR 390402	CONNECTING ROD ASSEMBLY	1
21	BR 222114	LOCK - connecting rod bolt	1
22	BR 92659	BOLT - connecting rod	2
23	BR 27803	GASKET - valve cover	1
24	BR 390419	VALVE - exhaust	1
25	BR 93630	LOCK - exhaust valve	2
26	BR 292260	ROTATOR - exhaust valve	1
27	BR 261055	VALVE - intake	1
28	BR 221586	KEEPER - intake valve	1
29	BR 65906	SPRING - intake valve	1
30	BR 26828	SPRING - exhaust valve	1
31	BR 260933	TAPPET - valve	2
32	BR 210728	GEAR - cam	1
33	BR 230759	SHAFT - governor lever	1
34	136- 103	PIN - hair	1
35	A 27795	RETAINER	1
36	BR 221898	BAFFLE - cylinder	1
37	BR 93163	SCREW - baffle mtg.	1
38	BR 222117	COVER - breaker points	1

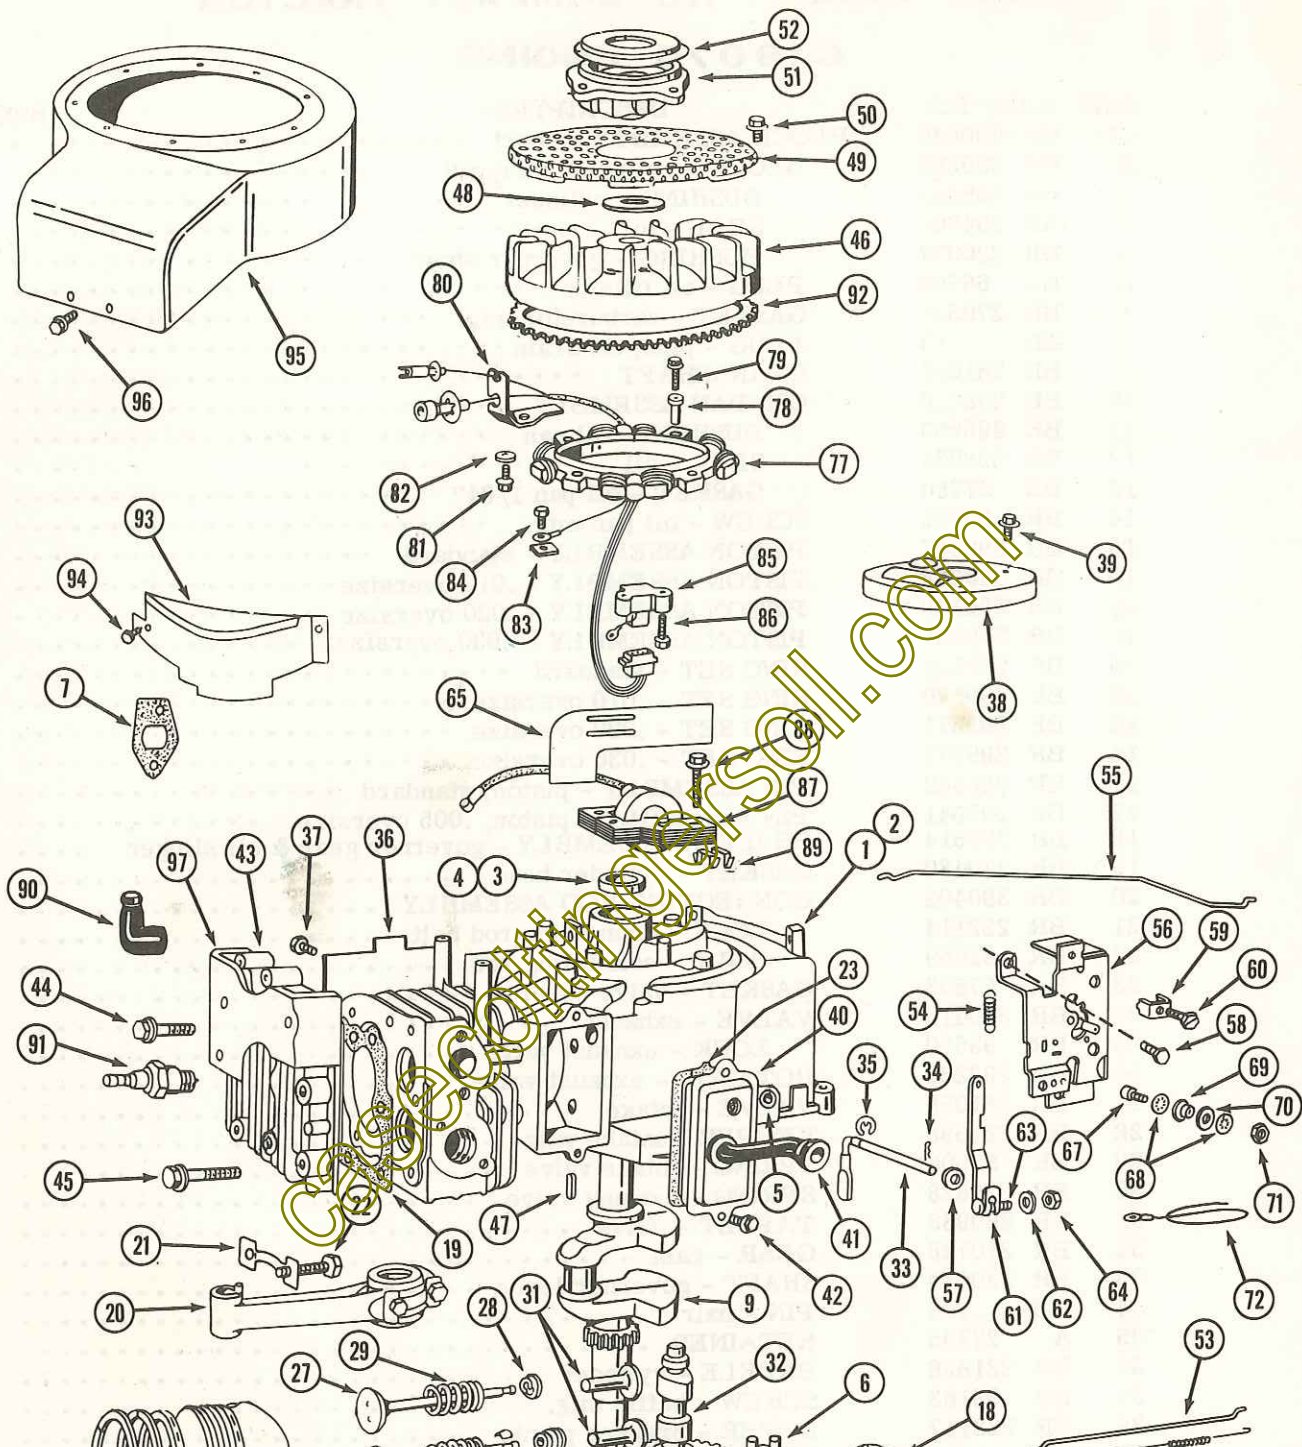

CASE MODEL 118 COMPACT TRACTOR
C19070 ENGINE


REF.	PART NO.	DESCRIPTION	REQ'D
40	BR 299848	BREATHER ASSEMBLY - crankcase	1
41	BR 280005	TUBE - breather	1
42	BR 93536	SCREW - sems	2
43	BR 211778	HEAD - cylinder	1
44	BR 93210	BOLT - cylinder head, 2-9/32"	3
45	BR 93211	BOLT - cylinder head, 2-21/32"	4
46	BR 390180	FLYWHEEL	1
47	BR 61760	KEY - flywheel	1
48	BR 220865	WASHER - spring	1
49	BR 221796	SCREEN - flywheel	1
50	BR 93042	SCREW - sems	4
51	BR 211383	HOUSING - screen mounting	1
52	BR 222277	COVER - screen housing	1
53	BR 260971	LINK - governor	1
54	BR 261129	SPRING - governor	1
55	BR 261117	LINK - choke	1
56	BR 390662	PLATE - governor control	1
57	BR 221559	WASHER - governor lever	1
58	BR 93572	SCREW - governor lever	1
59	BR 221535	CLAMP	1
60	BR 93496	SCREW - sems	1
61	BR 298303	LEVER ASSEMBLY - governor	1
62	BR 220680	WASHER - #10	1
63	11- 312	BOLT - #10 NC round head	1
64	129- 7	NUT - #10 NC hex	1
65	BR 221760	GUIDE - air	1
66	BR 260584	SPRING - governor link	1
67	BR 91920	SCREW - # 8 x 5/8" flat hd. mach.	1
68	193- 25	LOCKWASHER - # 8 internal tooth	2
69	BR 66554	COLLAR - insulating	1
70	BR 66068	WASHER - insulating	1
71	129- 6	NUT - # 8 NC hex	2
72	BR 299500	WIRE - ground	1
73	BR 390918	MUFFLER - exhaust	1
74	BR 221885	SHIELD - heat	1
75	BR 222263	LOCK - screw	1
76	BR 93704	SCREW - muffler	2
77	BR 390693	STATOR - alternator	1
78	BR 230976	BUSHING - stator	4
79	BR 93621	SCREW - stator mtg.	4
80	BR 222211	BRACKET - fuse holder	1
81	BR 93536	SCREW - bracket mtg.	1
82	BR 220680	WASHER - bracket mtg.	1
83	BR 222212	RETAINER - wire	1
84	BR 93438	SCREW - retainer	1

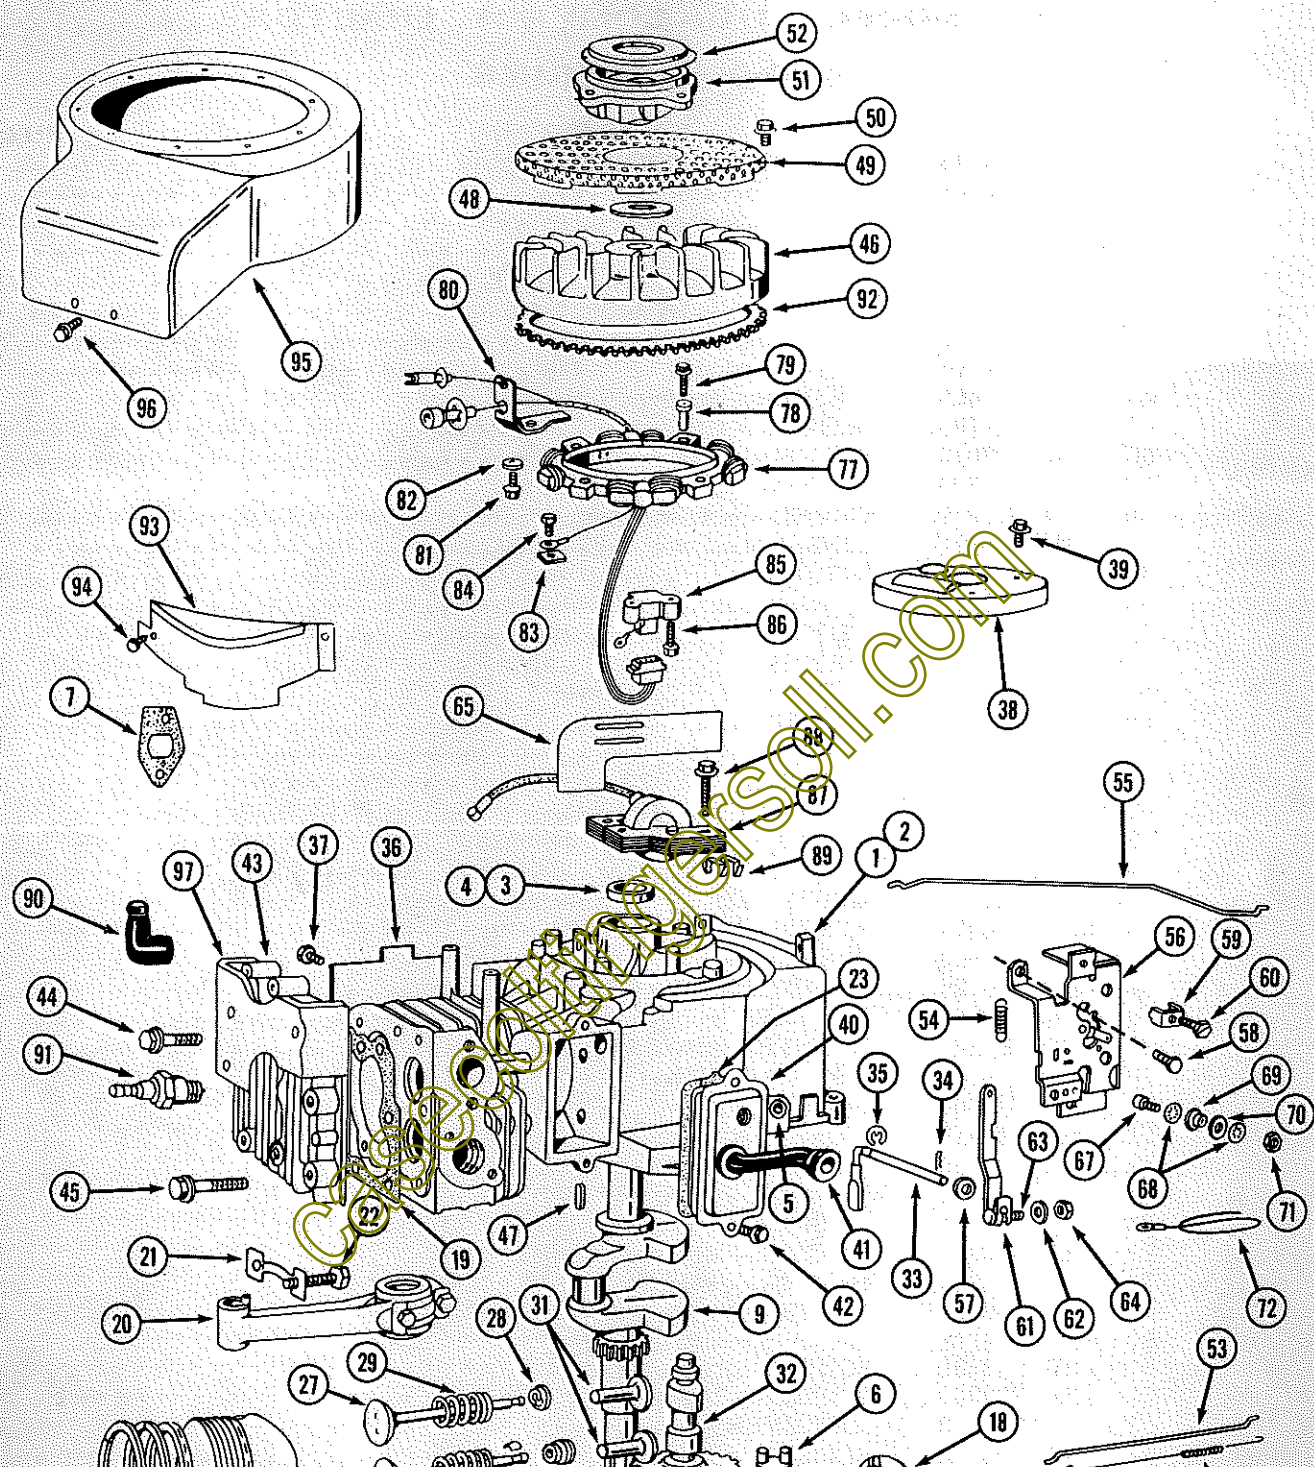

CASE MODEL 118 COMPACT TRACTOR
C19070 ENGINE

REF.	PART NO.	DESCRIPTION	REQ'D
85	BR 390892	RECTIFIER - alternator	1
86	BR 93621	SCREW - rectifier	1
87	BR 298968	COIL ASSEMBLY	1
88	BR 93381	SCREW - coil mtg.	2
89	BR 221907	CLIP - wire	1
90	BR 66538	INSULATOR - spark plug	1
91	M 20677	SPARK PLUG	2
92	BR 299543	GEAR - ring	1
93	BR 390233	SHIELD - starter	1
94	BR 93410	SCREW - shield mtg.	2
95	BR 299392	HOUSING - blower	1
96	BR 93158	SCREW - blower housing mtg.	4
97	BR 221901	BAFFLE - cylinder head	1
	BR 299577	KIT - engine gasket (includes items 7, 13, 19 & 23)	1

casecoltingersoll.com



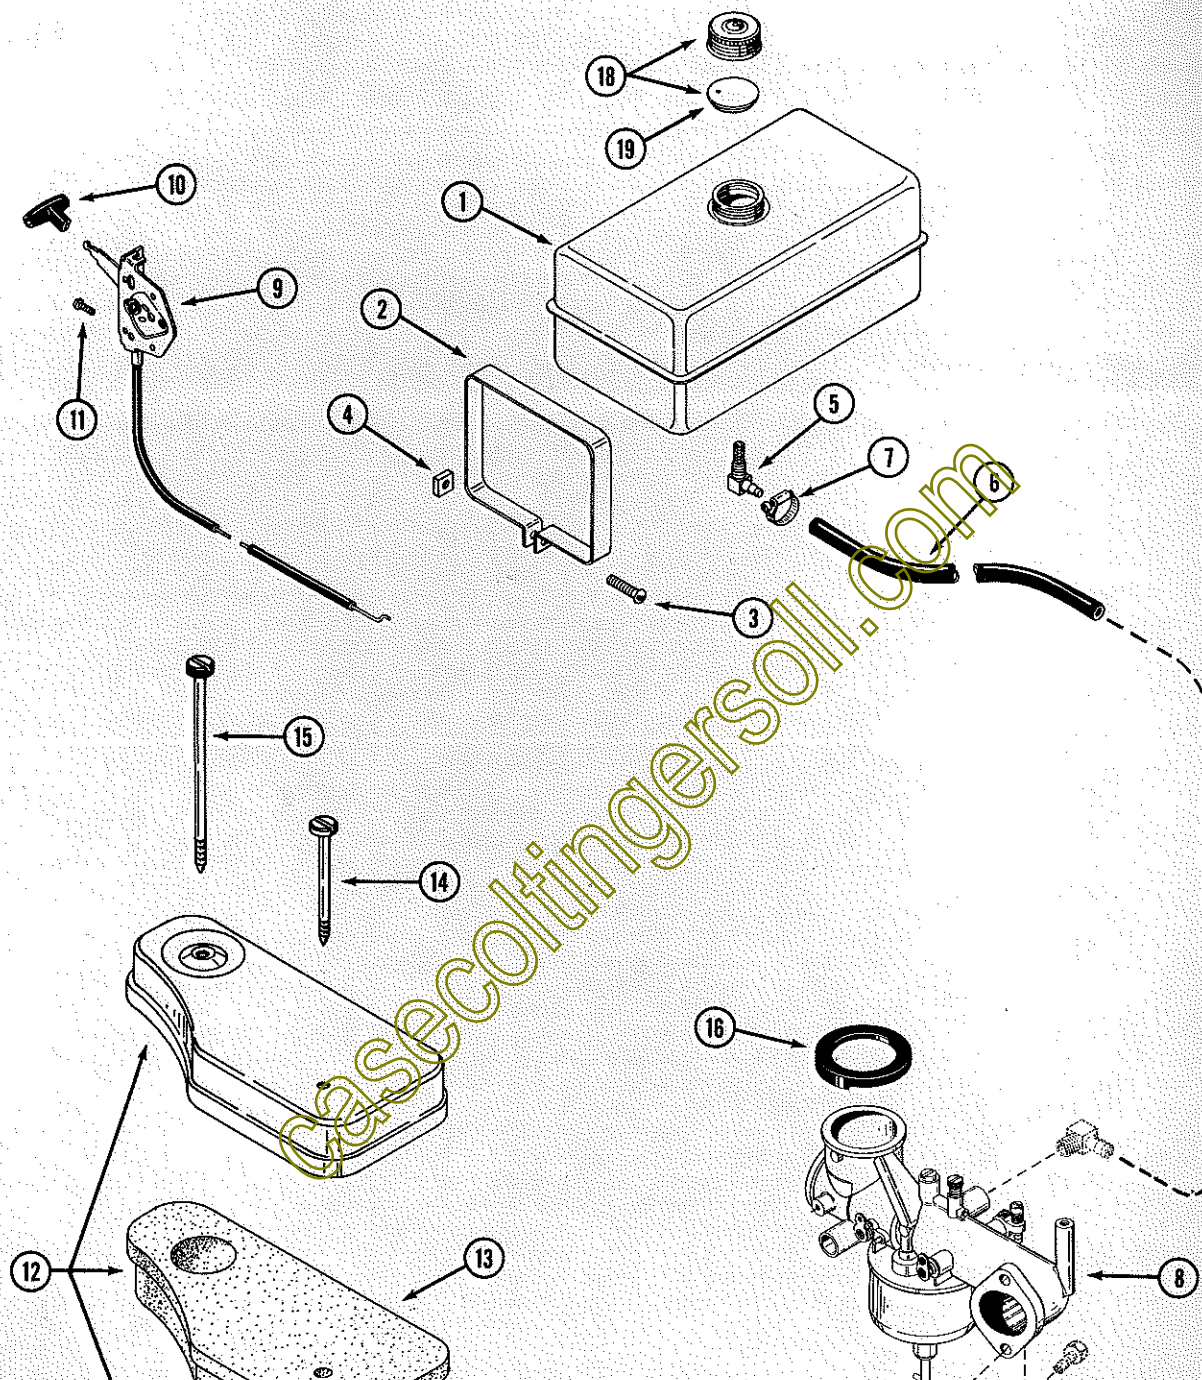


CASE MODEL 118 COMPACT TRACTOR

FUEL SYSTEM

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 15519	TANK - fuel	1
2	C 15174	STRAP - tank	2
3	173- 215	SCREW - round head mach. 1/4" x 1-1/4"	2
4	129- 504	NUT - 1/4" sq.	2
5	C 10657	ELBOW	1
6	C 15526	FUEL LINE - 18"	1
7	214- 103	CLAMP - hose	2
8	BR 390811	CARBURETOR - (repairs page 13).....	1
9	C 18206	CONTROL - choke and throttle	1
10	C 15540	HANDLE - T	1
11	187- 1047	SCREW - self tapping Phillips head	2
12	BR 390379	CLEANER ASSEMBLY - air	1
13	BR 270528	ELEMENT - air cleaner	1
14	BR 93622	SCREW - air cleaner	1
15	BR 93323	SCREW - air cleaner	1
16	BR 270539	GASKET - air cleaner	1
17	BR 270538	GASKET - carburetor mounting	1
18	C 11529	CAP - fuel tank	1
19	C 11545	INSERT - fuel cap	1

casecoltingersoll.com

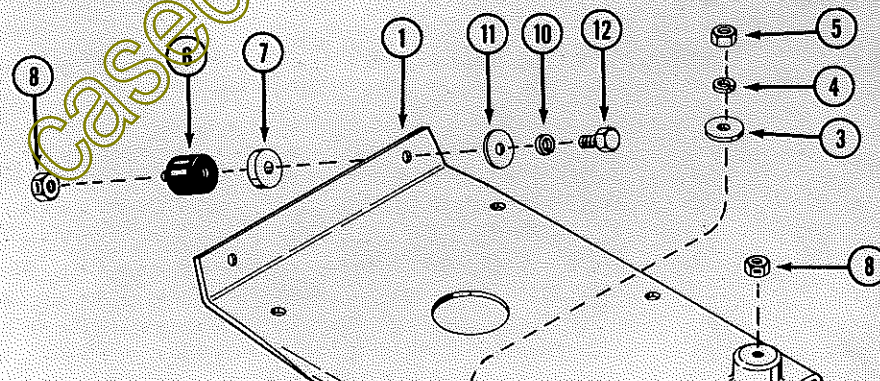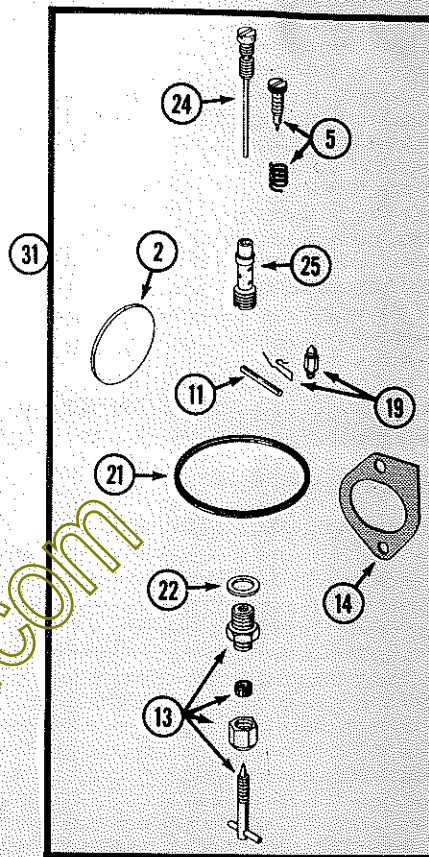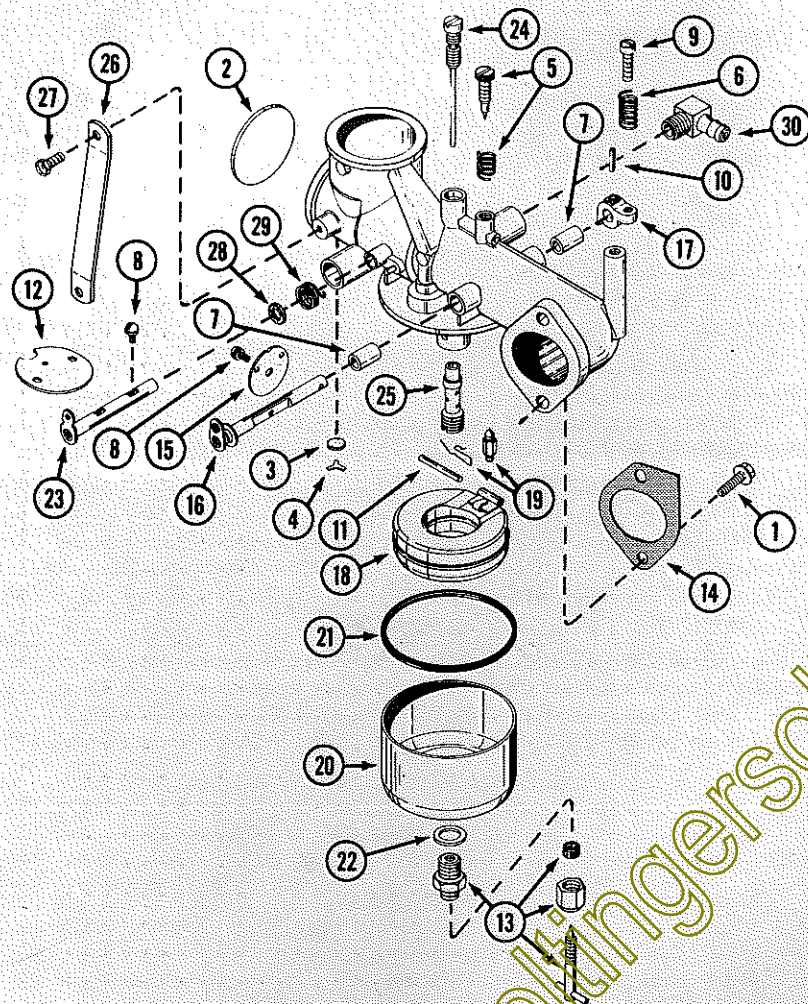

CASE MODEL 118 COMPACT TRACTOR


CARBURETOR

REF.	PART NO.	DESCRIPTION	REQ'D
1	BR 93357	SCREW - carburetor mtg.	2
2	41- 24	PLUG - welch	1
3	BR 27590	FILTER - carburetor drain	1
4	BR 220521	RETAINER - carburetor drain filter	1
5	BR 292681	VALVE ASSEMBLY - carburetor idle	1
6	BR 26157	SPRING - throttle adj.	1
7	BR 23108	BUSHING - throttle shaft	2
8	BR 93038	SCREW - throttle and choke mtg.	3
9	BR 91920	SCREW - #8 x 5/8" mach.	1
10	138- 251	PIN - throttle stop	1
11	BR 230896	PIN - float hinge	1
12	BR 222010	VALVE - choke	1
13	BR 299762	VALVE ASSEMBLY - needle	1
14	BR 270538	GASKET - carburetor mounting	1
15	BR 221986	VALVE - throttle	1
16	BR 299650	SHAFT AND LEVER - throttle	1
17	BR 211712	STOP - throttle	1
18	BR 299707	FLOAT - carburetor	1
19	BR 299096	VALVE - fuel inlet assembly	1
20	BR 221995	BOWL - float	1
21	BR 270511	GASKET - float bowl	1
22	BR 222014	WASHER - float bowl	1
23	BR 390684	SHAFT AND LEVER - choke	1
24	BR 299740	NOZZLE - carburetor	1
25	BR 230932	SCREW - nozzle	1
26	BR 222027	BRACKET - carburetor	1
27	BR 93572	SCREW - bracket mounting	2
28	BR 270382	WASHER - choke shaft	1
29	BR 261116	SPRING - choke return	1
30	C 10678	CONNECTOR - fuel pipe	1
31	BR 299852	KIT - carburetor overhaul	1

Page 12 of 12

ENGINE MOUNTING PLATE


1	C 19012	PLATE - engine mtg.	1
2	164- 543	SCREW - cap hex socket head 5/16" x 1-1/2" NC	4
3	C 16752	WASHER - flat 5/16"	4
4	192- 20	LOCKWASHER - 5/16"	4
5	129- 102	NUT - 5/16" NC hex	4
6	C 19073	MOUNT - flex bolt	4
7	C 19008	SCACER	4
8	131- 1115	LOCKNUT - 1/4" NC hex	4
9	113- 2	BOLT - 1/4" x 5/8" NC hex	2

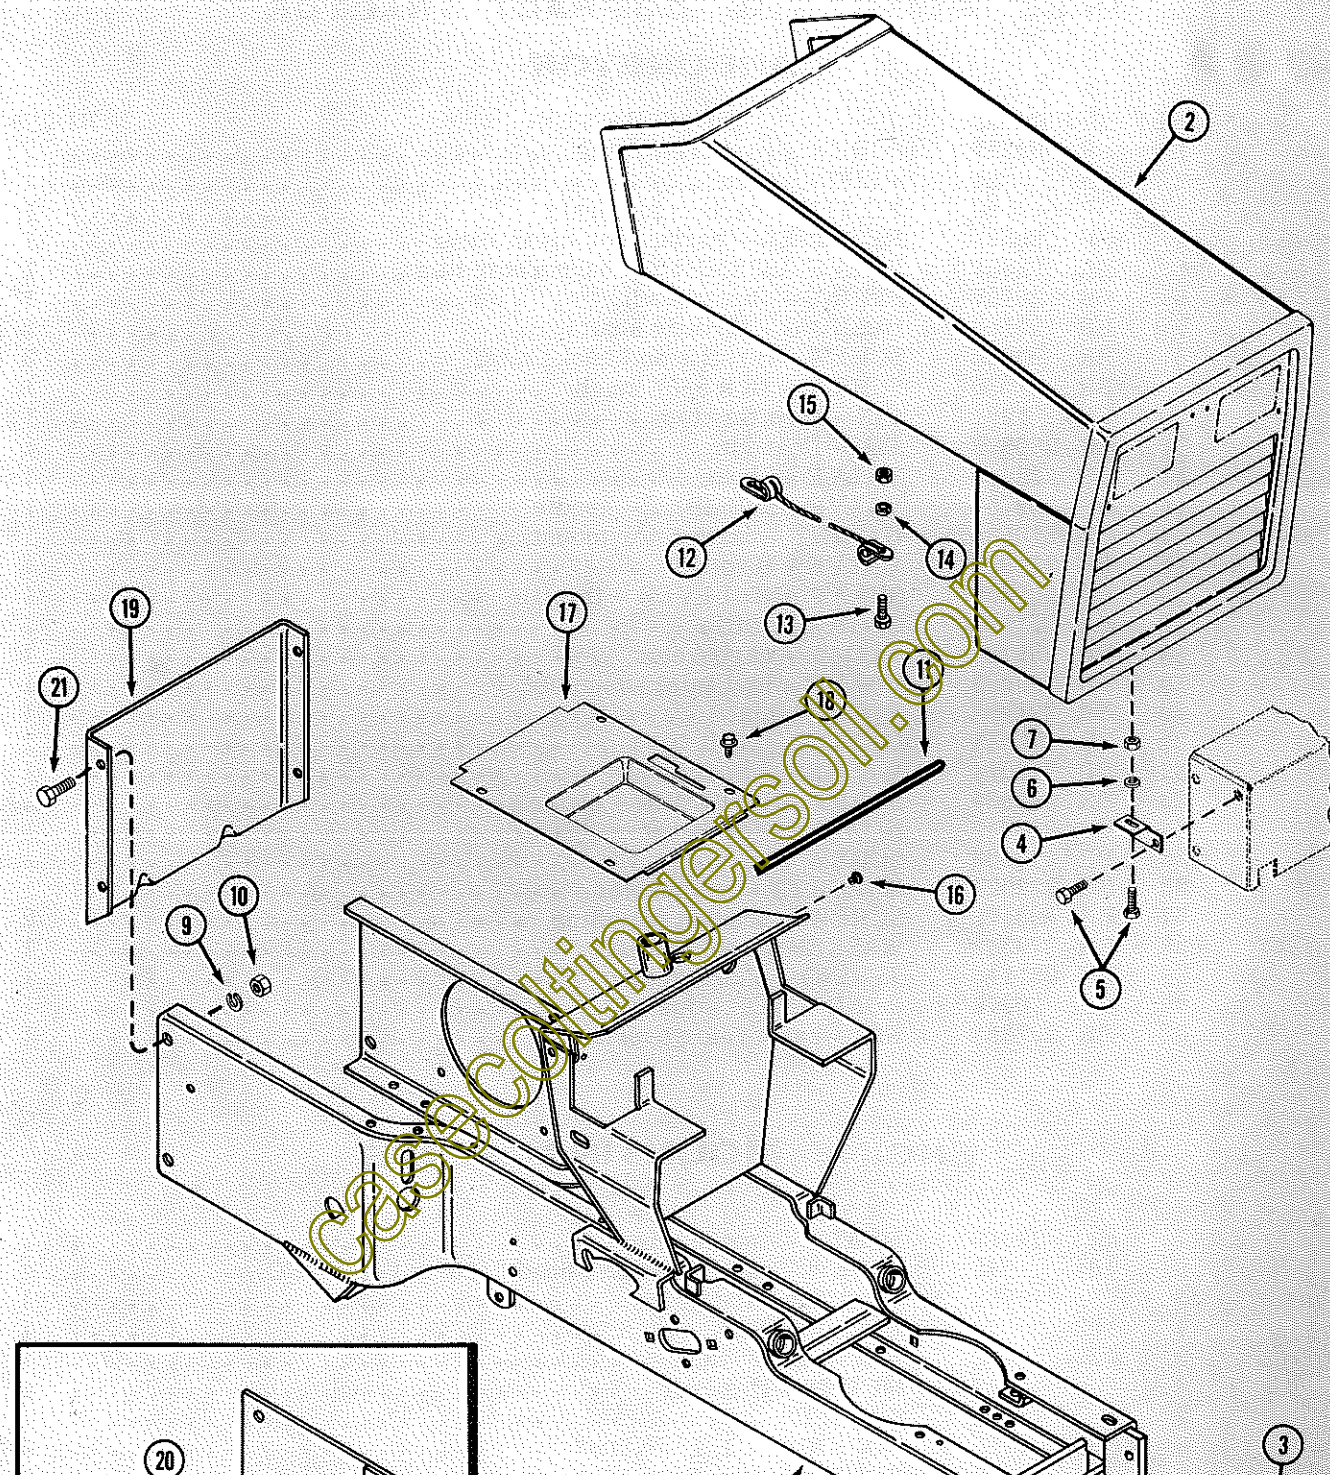

CASE MODEL 118 COMPACT TRACTOR

HOOD, FRAME AND GRILLE


REF.	PART NO.	DESCRIPTION	REQ'D
1	C 18479	FRAME - main	1
2	C 18670	HOOD AND GRILLE ASSEMBLY.....	1
3	C 18664	COVER - PTO	1
4	C 18662	CLIP - hood hinge R.H.	1
	C 18661	CLIP - hood hinge L.H.	1
5	113- 103	BOLT - 5/16" x 1" NC	4
6	192- 20	LOCKWASHER - 5/16".....	2
7	129- 102	NUT - 5/16" hex NC	2
8	113- 207	BOLT - 3/8" x 1" NC	4
9	192- 21	LOCKWASHER - 3/8".....	8
10	129- 103	NUT - 3/8" NC hex	8
11	C 18205	CHANNEL - instrument panel liner	1
12	C 19069	LANYARD - hood	1
13	113- 4	BOLT - 1/4" x 1" NC	1
14	192- 19	LOCKWASHER - 1/4"	1
15	129- 101	NUT - 1/4" NC hex	1
16	C 17038	BUMPER - plug	2
17	C 19112	PLATE - center	1
18	187- 1036	SCREW - -/4" x 1/2" self tapping	4
19	C 15116	DRAWBAR	1
20	NSS	WEIGHT BOX - (optional order as machinery item)	1
21	113- 206	BOLT - 3/8" x 3/4" NC hex	4

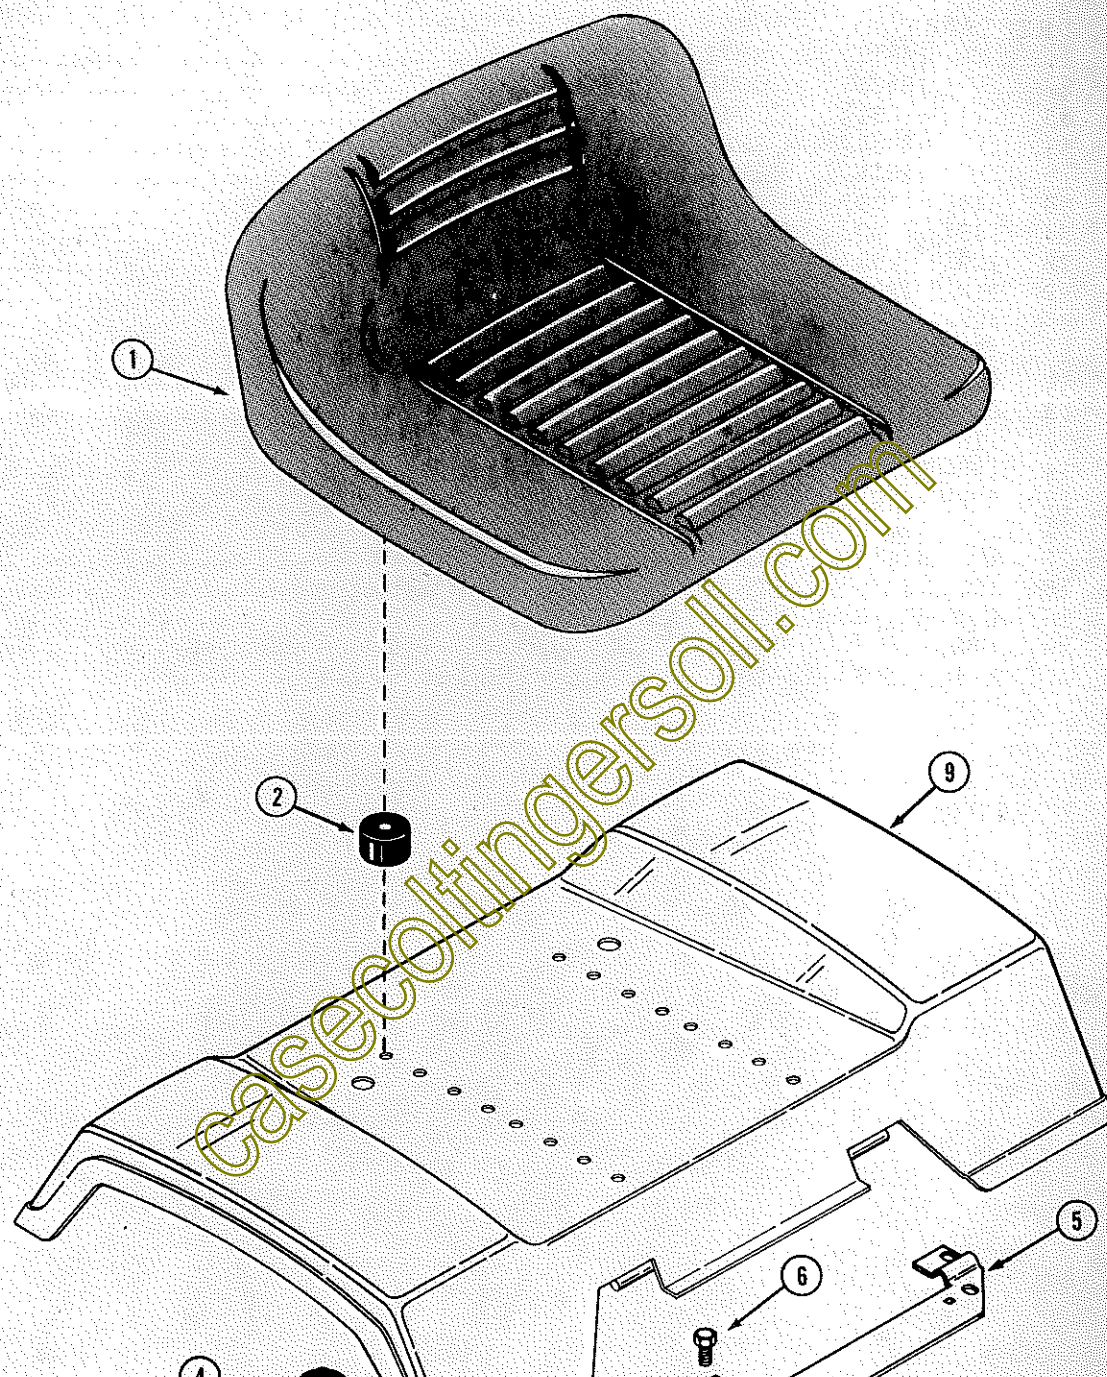

CASE MODEL 118 COMPACT TRACTOR
SEAT AND FENDERS

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 16129	SEAT ASSEMBLY	1
2	C 15610	MOUNT - seat, rubber	4
3	113- 122	BOLT - 5/16" x 1-1/2" NC hex	4
4	C 14534	BUMPER - seat, rubber	2
5	C 19118	BRACKET - hinge	2
6	113- 102	BOLT - 5/16" x 3/4" NC hex	4
7	192- 20	LOCKWASHER - 5/16"	4
8	129- 102	NUT - 5/16" NC hex	2
9	C 18702	FENDER AND SUPPORT	1


casecoltingersoll.com

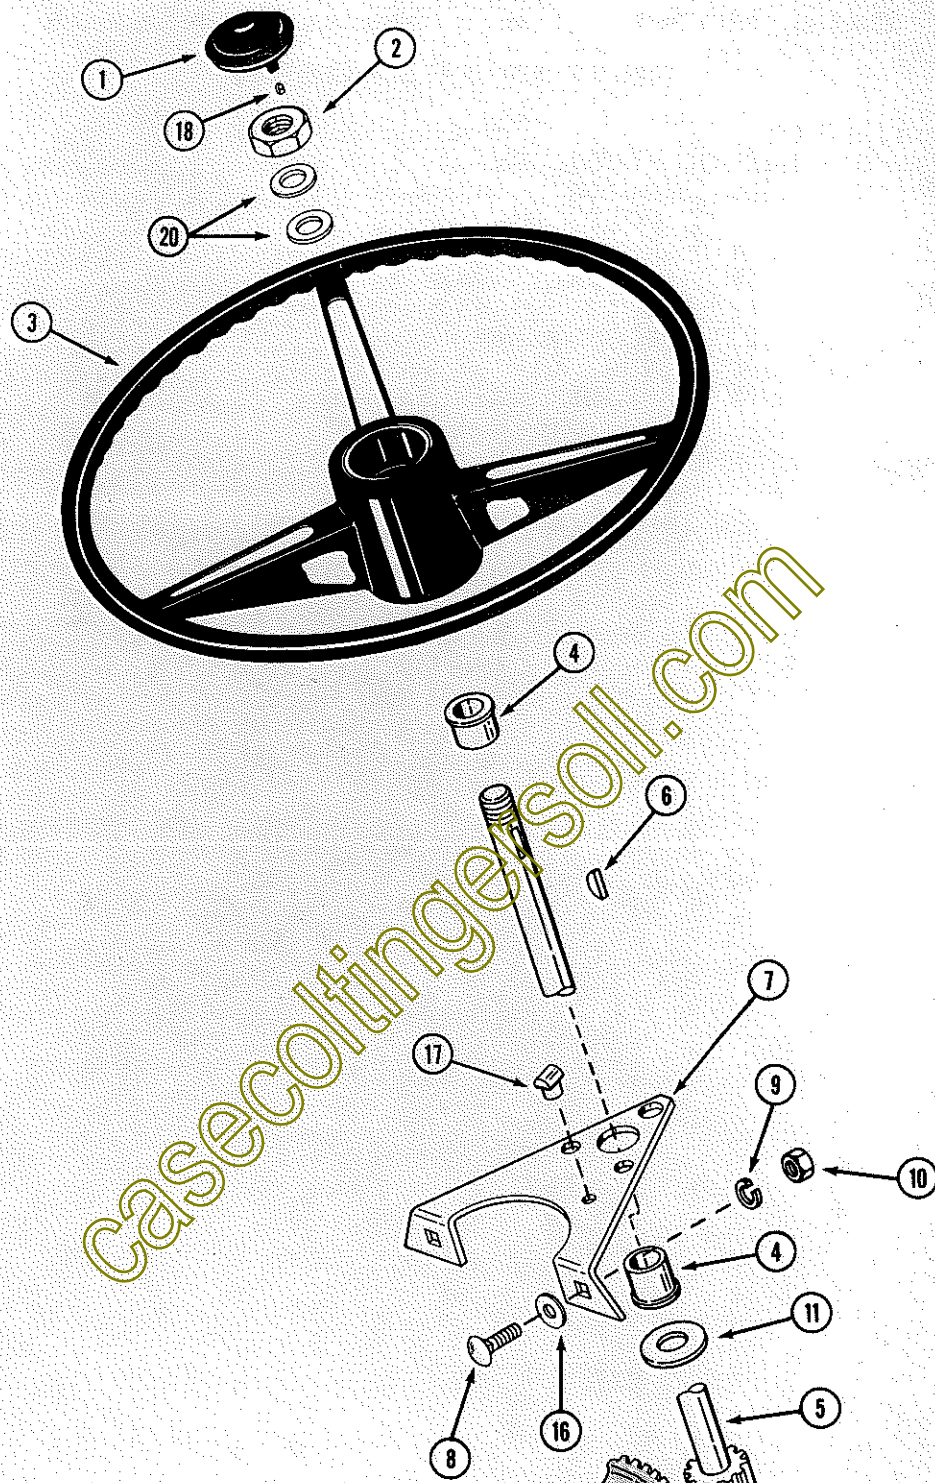

CASE MODEL 118 COMPACT TRACTOR

STEERING GEAR

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 18016	CAP - steering	1
2	131- 1113	NUT - jam 5/8" NC hex	1
3	C 18015	WHEEL - steering	1
4	C 15096	BUSHING - flanged nylon	2
5	C 15097	SHAFT - steering	1
6	126- 16	KEY - Woodruff 3/16" x 3/4"	1
7	C 16245	BRACKET - steering	1
8	111- 202	BOLT - 5/16" x 3/4" NC, round head, square neck ZP	2
9	192- 20	LOCKWASHER - 5/16" ZP	4
10	129- 102	NUT - 5/16" NC hex, ZP	2
11	195- 2069	WASHER - 5/8" plain, ZP	1
12	C 15104	GEAR - steering	1
13	C 15105	PIVOT - steering gear	1
14	219- 17	FITTING - lube	1
15	113- 103	BOLT - 5/16" x 1" NC hex, ZP	2
16	195- 521	WASHER - 5/16" plain, ZP	UAR
17	C 19641	BUTTON - friction	1
18	C 18017	CLIP - tinnerman	2
19	C 14201	WASHER - shim	1
20	C 12975	WASHER - 5/8"	2


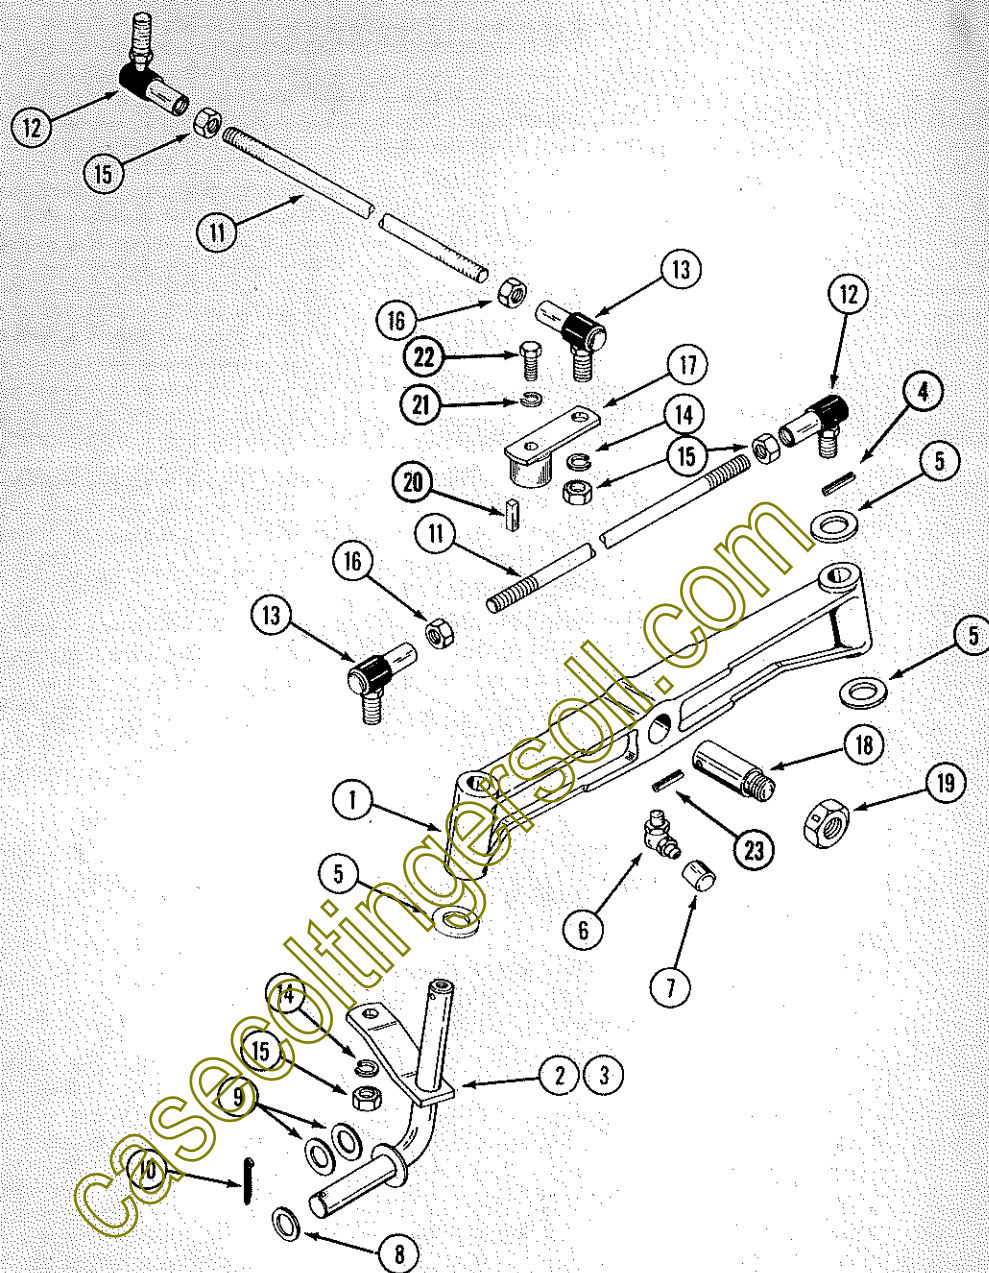


CASE MODEL 118 COMPACT TRACTOR**FRONT AXLE**

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 15066	AXLE - front	1
2	C 16946	SPINDLE - right hand	1
3	C 16724	SPINDLE - left hand	1
4	138- 2055	PIN - roll L.H. spindle 3/16" x 1-1/2"	1
5	C 11906	WASHER - thrust 13/16"	3
6	219- 404	FITTING - lube	3
7	C 13106	COVER - lube fitting	3
8	C 12975	WASHER - spindle	2
9	A 30881	WASHER - wheel spacer	UAR
10	132- 311	PIN - cotter 5/32" x 1-1/4"	2
11	C 15067	ROD - tie and drag link	2
12	C 15113	BALL JOINT - R.H. thread	2
13	C 15068	BALL JOINT - L.H. thread	2
14	192- 23	LOCKWASHER - 1/2" ZP	4
15	129- 125	NUT - 1/2" NF hex	5
16	129- 325	NUT - 1/2" NC hex, L.H. thread	2
17	C 16948	ARM - upper spindle	1
18	C 18626	PIN - axle pivot	1
19	131- 1127	NUT - jam 3/4" NC hex	1
20	T 33565	KEY - 1/4" x 1/4" x 1"	1
21	192- 20	LOCKWASHER - 5/16"	1
22	113 103	BOLT - 5/16" x 1" NC hex	1
23	138- 2040	PIN - spirol roll 1/4" x 1-1/2"	1

FRONT AND REAR WHEELS

1	C 15090	WHEEL - front (includes bearing)	2
2	C 12110	BEARING - sealed, inner	2
3	C 12111	BEARING - outer	2
4	219- 10	FITTING - lube	2
5	C 12370	CAP - hub	2
6	C 15093	WHEEL - rear	2
7	126- 21	KEY - Woodruff "A" 1/4" x 7/8"	2
8	195- 2029	WASHER - 3/8" plain, ZP	2
9	192- 21	LOCKWASHER - 3/8" ZP	2
10	113- 207	BOLT - 3/8" x 1" NC hex, ZP	2
11	C 13716	WASHER - 1" 10 gauge	2
12	C 10292	WASHER - 1" 18 gauge	2

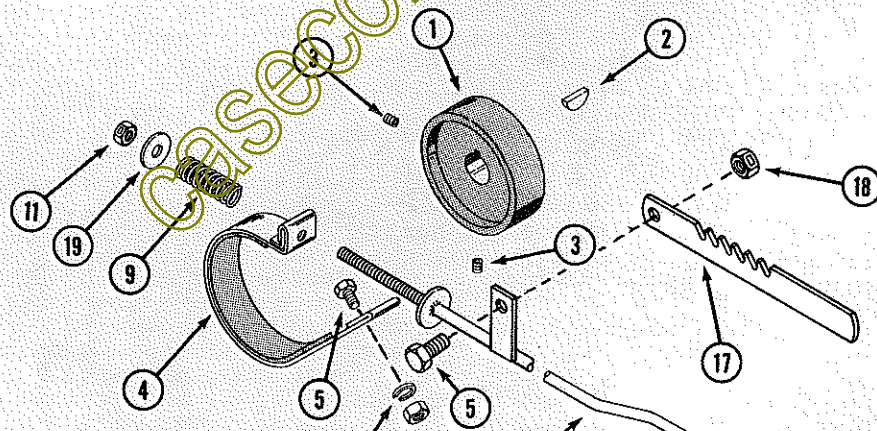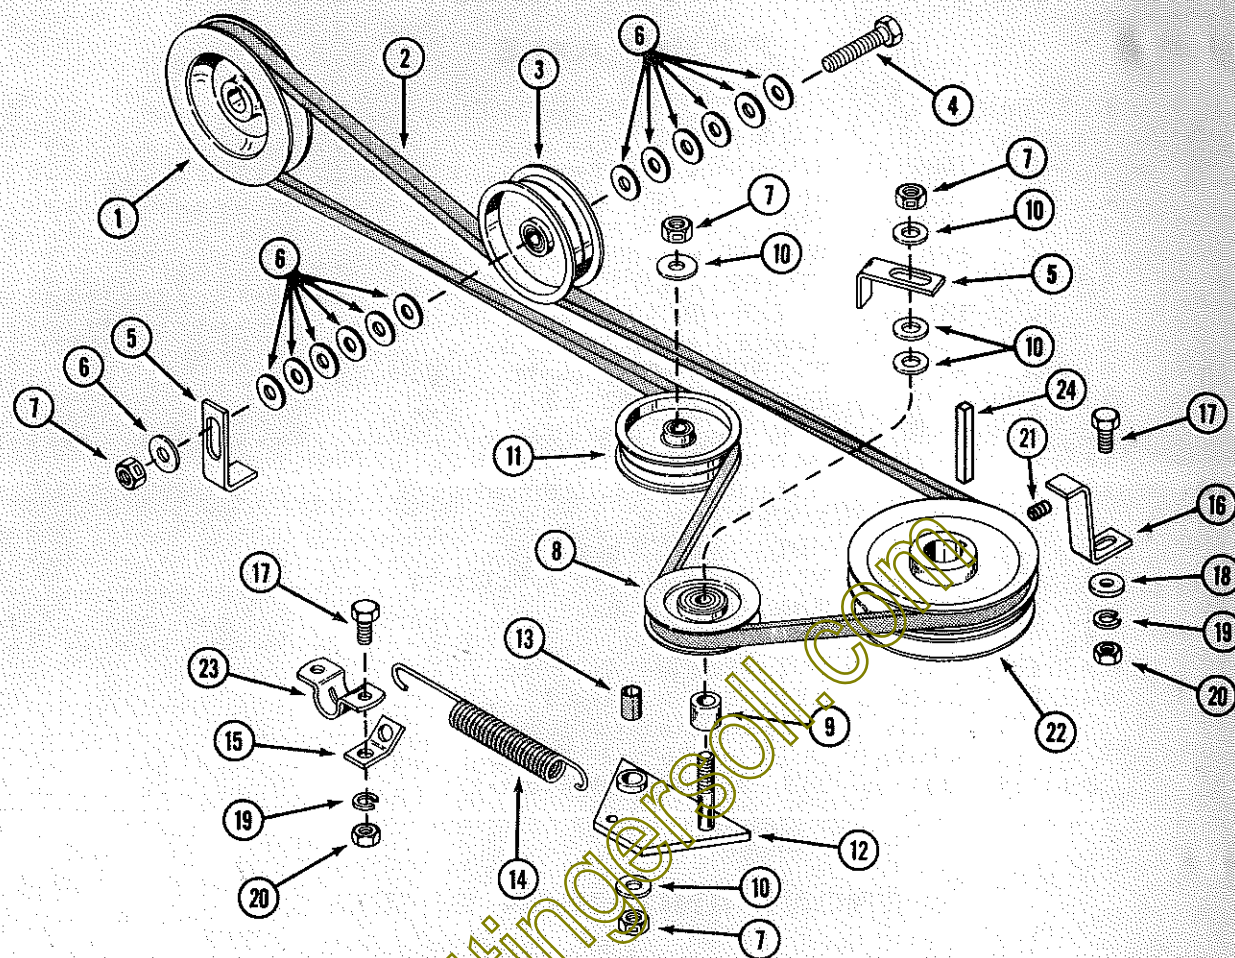


CASE MODEL 118 COMPACT TRACTOR BELTS, PULLEYS AND IDLERS

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 15511	PULLEY - transmission	1
2	C 18468	BELT - drive	1
3	C 16739	PULLEY - idler, flat	1
4	113- 219	BOLT - 3/8" x 2" NC hex	1
5	C 17164	KEEPER - belt	2
6	195- 104	WASHER - 3/8"	16
7	131- 178	LOCKNUT - 3/8" NC hex	4
8	C 17213	PULLEY - idler	1
9	C 17204	BUSHING - idler pulley	1
10	195- 525	WASHER - 3/8"	5
11	C 13012	PULLEY - idler, flat	1
12	C 17207	ARM - clutch idler	1
13	C 17203	BEARING - sleeve	1
14	C 15178	SPRING - idler	1
15	C 15545	BRACKET - spring, idler	1
16	C 17866	KEEPER - belt	1
17	113- 102	BOLT - 5/16" x 3/4" NC hex	1
18	C 16752	WASHER - 5/16"	1
19	192- 20	LOCKWASHER - 5/16"	1
20	129- 102	NUT - 5/16" NC hex	1
21	178- 858	SETSCREW - 5/16" x 3/8" NC socket head	2
22	C 19072	PULLEY - engine, drive & PTO	1
23	C 15156	BRACKET - saddle	1
24	T 25070	KEY - 1/4" square x 2" long	1


BRAKE ASSEMBLY

1	C 15106	DRUM - brake	1
2	126- 16	KEY - Woodruff #9	1
3	178- 858	SETSCREW - 5/16" x 3/8" NC hex socket	2
4	C 15127	BAND - brake assembly	1
5	113- 102	BOLT - 5/16" x 3/4" NC hex	6
6	192- 20	LOCKWASHER - 5/16"	5
7	129- 102	NUT - 5/16" NC hex	5
8	C 19107	ROD - brake	1
9	L 32763	SPRING - brake return	1
10	132- 26	PIN - cotter 3/32" x 3/4"	1
11	131- 176	LOCKNUT - 5/16" NC hex	1
12	132- 48	PIN - cotter 1/8" x 1	2
13	C 17211	PEDAL ASSEMBLY - brake	1
14	C 15156	BRACKET - saddle	2
15	138- 92	PIN - roll	1

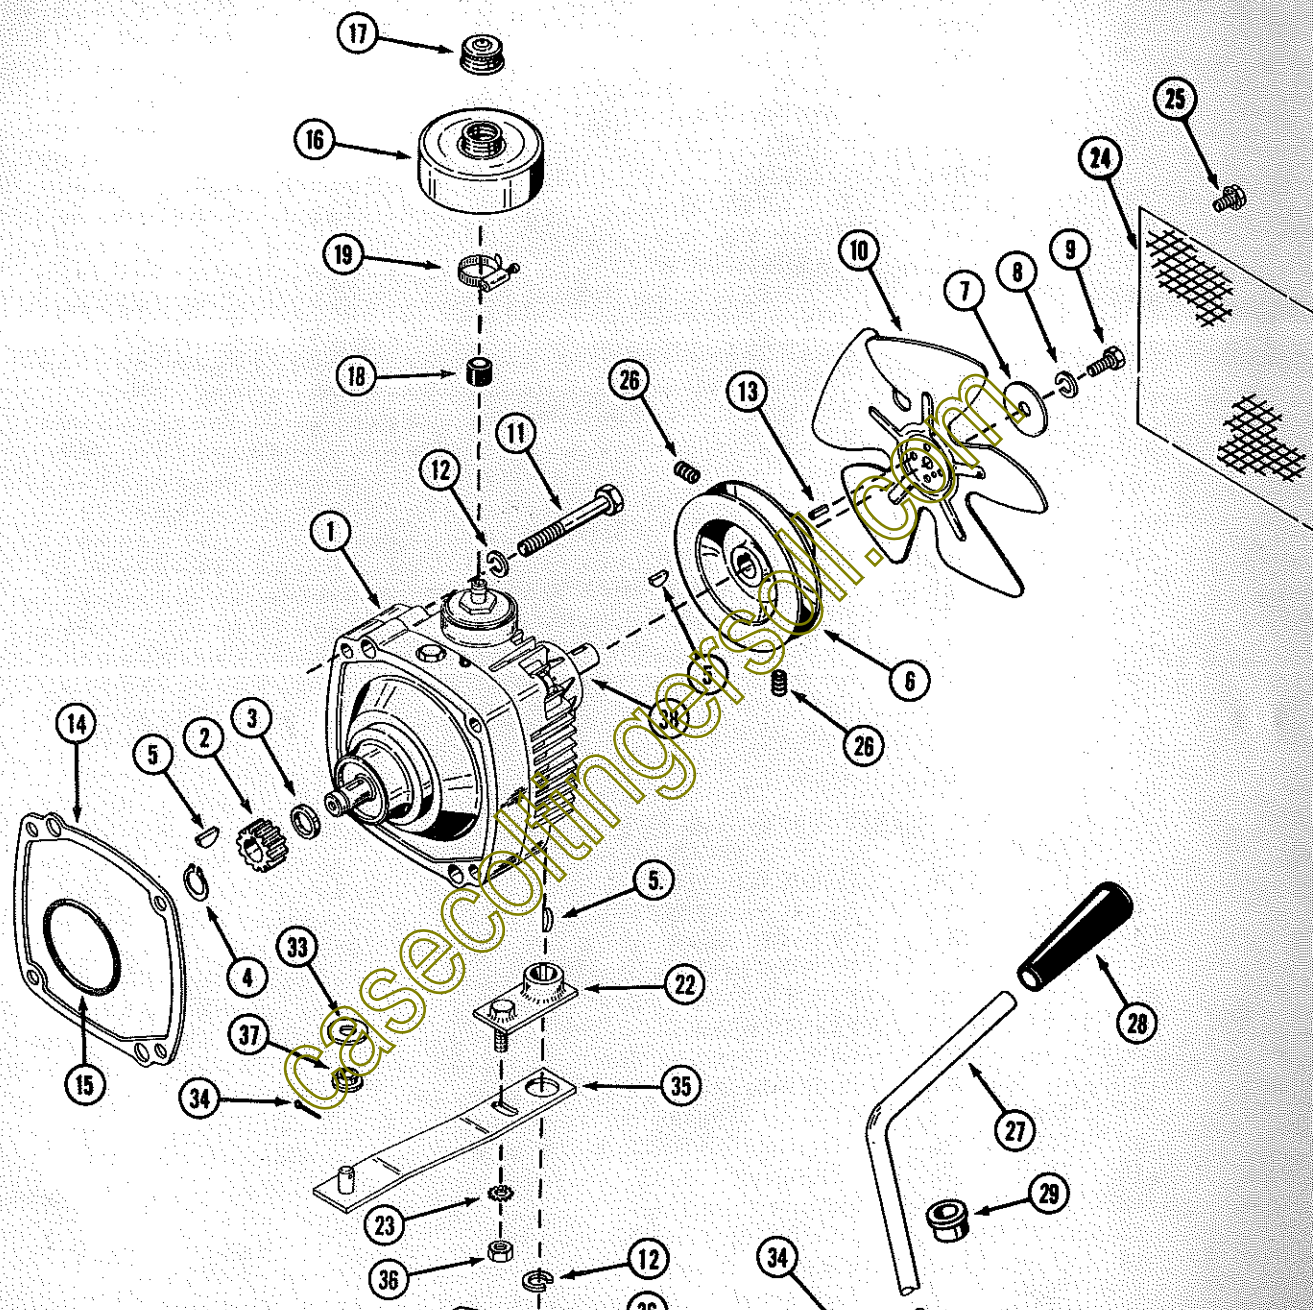



CASE MODEL 118 COMPACT TRACTOR **HYDRAULIC TRANSMISSION AND CONTROLS**



REF.	PART NO.	DESCRIPTION	REQ'D
1	C 18207	TRANSMISSION - hydraulic (includes items 2, 3, 4 and 5)	1
2	C 15546	GEAR - drive	1
3	C 15584	SPACER	1
4	C 15585	RING - retaining	1
5	126- 109	KEY - Woodruff #3	3
6	C 15511	PULLEY - transmission	1
7	195- 2012	WASHER - 1/4"	1
8	192- 19	LOCKWASHER - 1/4"	1
9	113- 2	BOLT - 1/4" x 5/8" NC hex	1
10	C 15155	FAN - transmission	1
11	113- 241	BOLT - 3/8" x 3" NC hex	4
12	192- 21	LOCKWASHER - 3/8"	5
13	138- 51	PIN - roll 1/8" x 3/8"	1
14	C 15534	GASKET - transmission	1
15	A 62549	SEAL - "O" ring, transmission	1
16	C 18209	TANK - surge	1
17	C 15549	CAP - tank	1
18	C 18210	SEAL - oil tank	1
19	214- 4	CLAMP - hose 3/4"	2
20	C 17231	GUIDE - neutral	1
21	131- 178	LOCKNUT - 3/8" NC hex	2
22	C 18837	HUB - travel control	1
23	193- 53	LOCKWASHER - 3/8" external tooth	1
24	C 15597	SCREEN	1
25	C 14900	SCREW - #10 x 3/8" NC hex self-tapping	4
26	178- 858	SETSCREW - 5/16" x 3/8" NC	2
27	C 19624	LEVER - speed control	1
28	A 37247	KNOB - speed control	1
29	C 12093	BUSHING - flip lock	1
30	C 11942	SPRING - control lever	1
31	131- 165	LOCKNUT - 1/2" NC hex	1
32	C 17234	LEVER - cam control	1
33	195- 521	WASHER - 5/16"	3
34	132- 320	PIN - cotter 3/32" x 3/4"	2
35	C 18839	LEVER - transmission control	1
36	129- 103	NUT - 3/8" NC hex	2
37	C 16898	BUSHING - cam	1
38	C 18233	KIT - input shaft and bearing	1

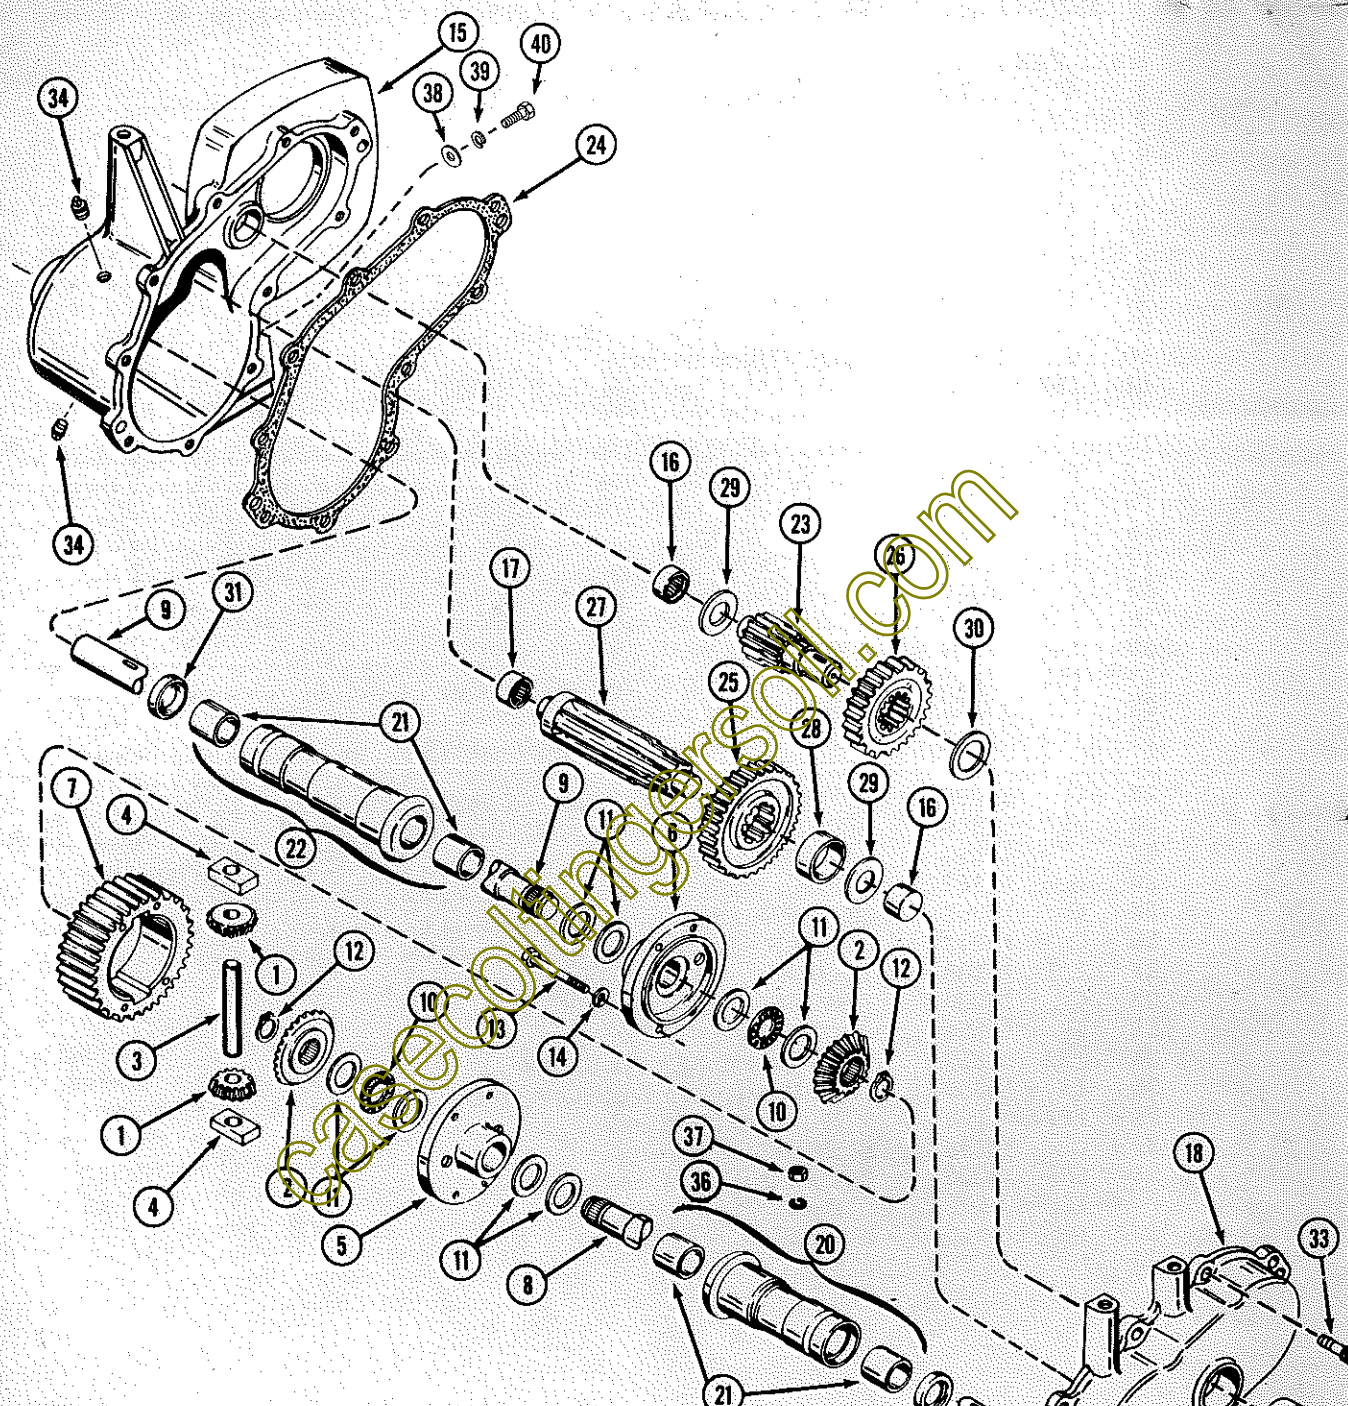

CASE MODEL 118 COMPACT TRACTOR **DIFFERENTIAL AND FINAL DRIVE**

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 15788	PINION - bevel	2
2	C 15808	GEAR - bevel	2
3	C 11173	PIN - drive	1
4	C 11174	BLOCK - drive	2
5	C 15812	CARRIER - differential	1
6	C 15811	CARRIER - differential	1
7	C 11172	GEAR - ring	1
8	C 15786	AXLE - L.H.	1
9	C 15787	AXLE - R.H.	1
10	F 19633	BEARING - thrust	2
11	C 11178	WASHER - thrust	8
12	C 11222	RING - retaining	1
13	13- 436	BOLT - 1/4" x 2-1/4" NC hex	4
14	92- 4	LOCKWASHER - 1/4"	4
15	C 15813	HOUSING - differential	1
16	C 16005	BEARING - needle	2
17	C 16006	BEARING - needle	1
18	C 15814	COVER - differential housing	1
		BEARING - needle (see Ref. 16)	1
19	C 16007	BEARING - needle	1
20	C 15803	HOUSING AND BUSHING ASSEMBLY - L.H.	1
21	C 15807	BUSHING	2
22	C 15804	HOUSING AND BUSHING ASSEMBLY - R.H.	1
		BUSHING - (see Ref. 21)	2
23	C 15815	SHAFT - brake	1
24	C 15816	GASKET - housing to cover	1
25	C 11193	GEAR - output	1
26	C 11187	GEAR - idler	1
27	C 15802	SHAFT - output	1
28	C 15801	SPACER	1
29	C 11205	WASHER	1
30	C 16009	WASHER	1
31	C 11195	SEAL - oil	2
32	F 53650	PIN - dowel	2
33	187- 996	SCREW - 1/4" x 1" NC hex head, self-tapping	10
34	221- 13	PLUG - oil filler and drain	2
35	C 15134	BOLT - "U" 5/16"	2
36	192- 20	LOCKWASHER - 5/16" ZP	4
37	129- 102	NUT - 5/16" NC hex, ZP	4
38	195- 104	WASHER - 3/8" flat	2
39	192- 21	LOCKWASHER - 3/8"	2
40	113- 206	BOLT - 3/8" x 3/4" NC hex	2

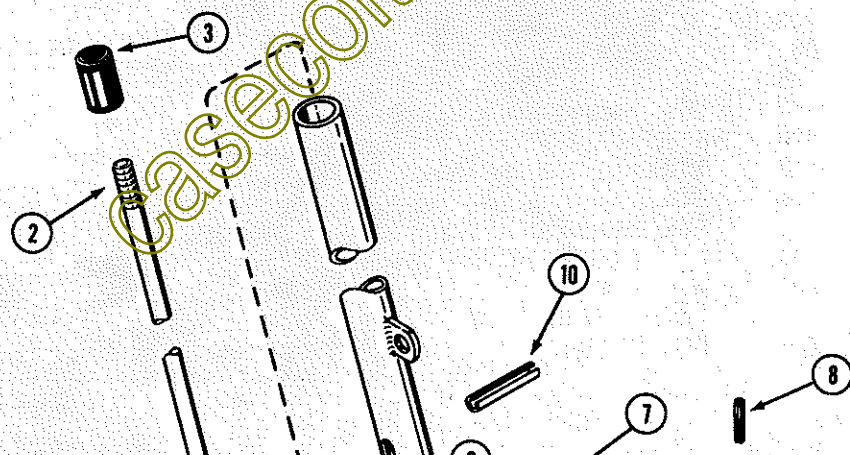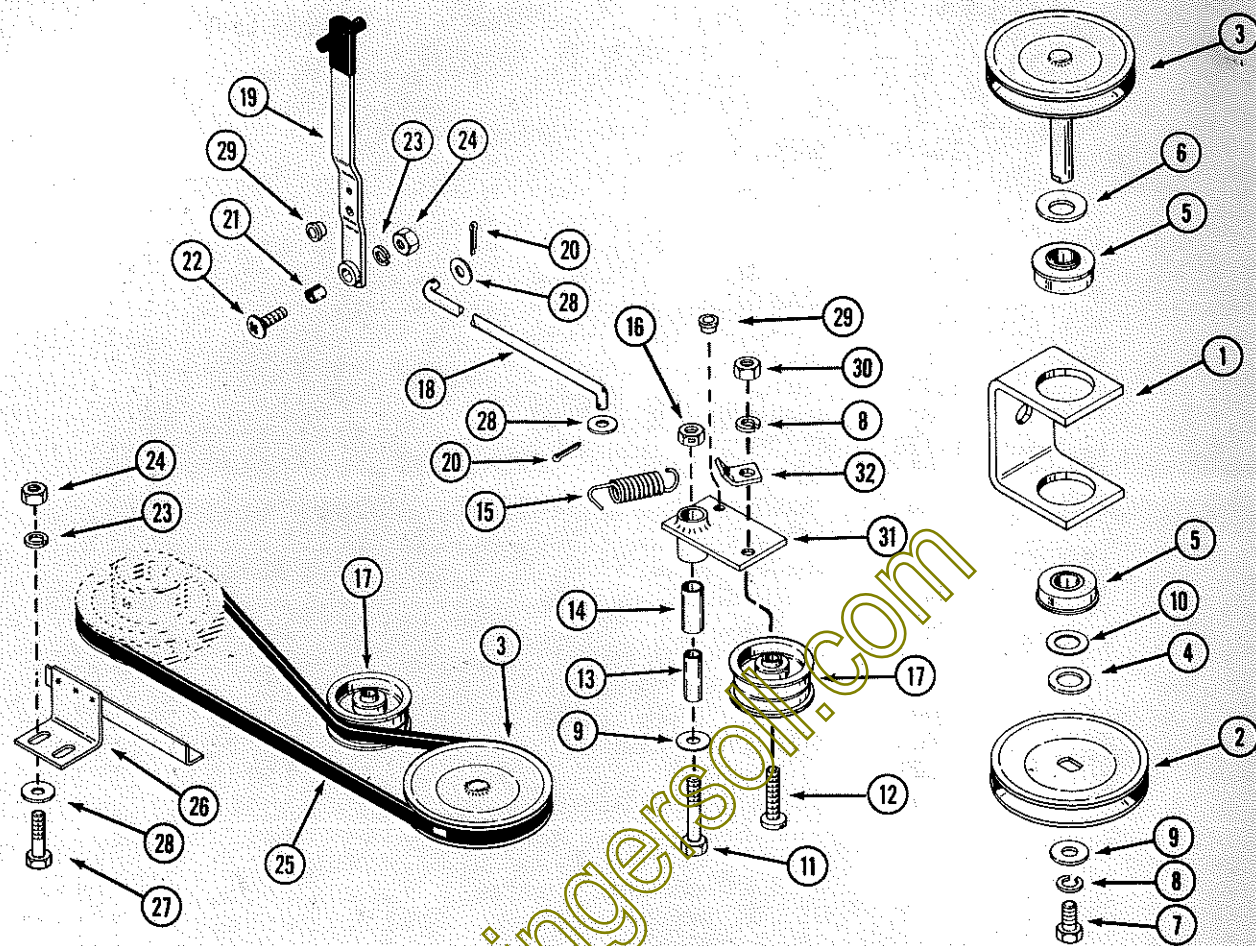

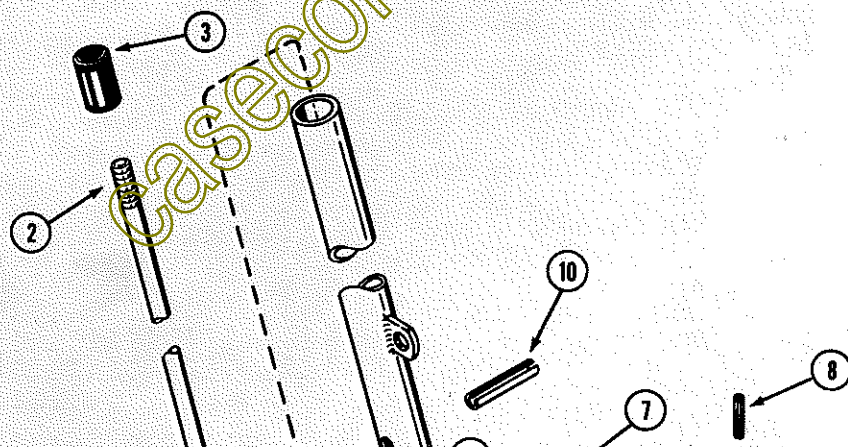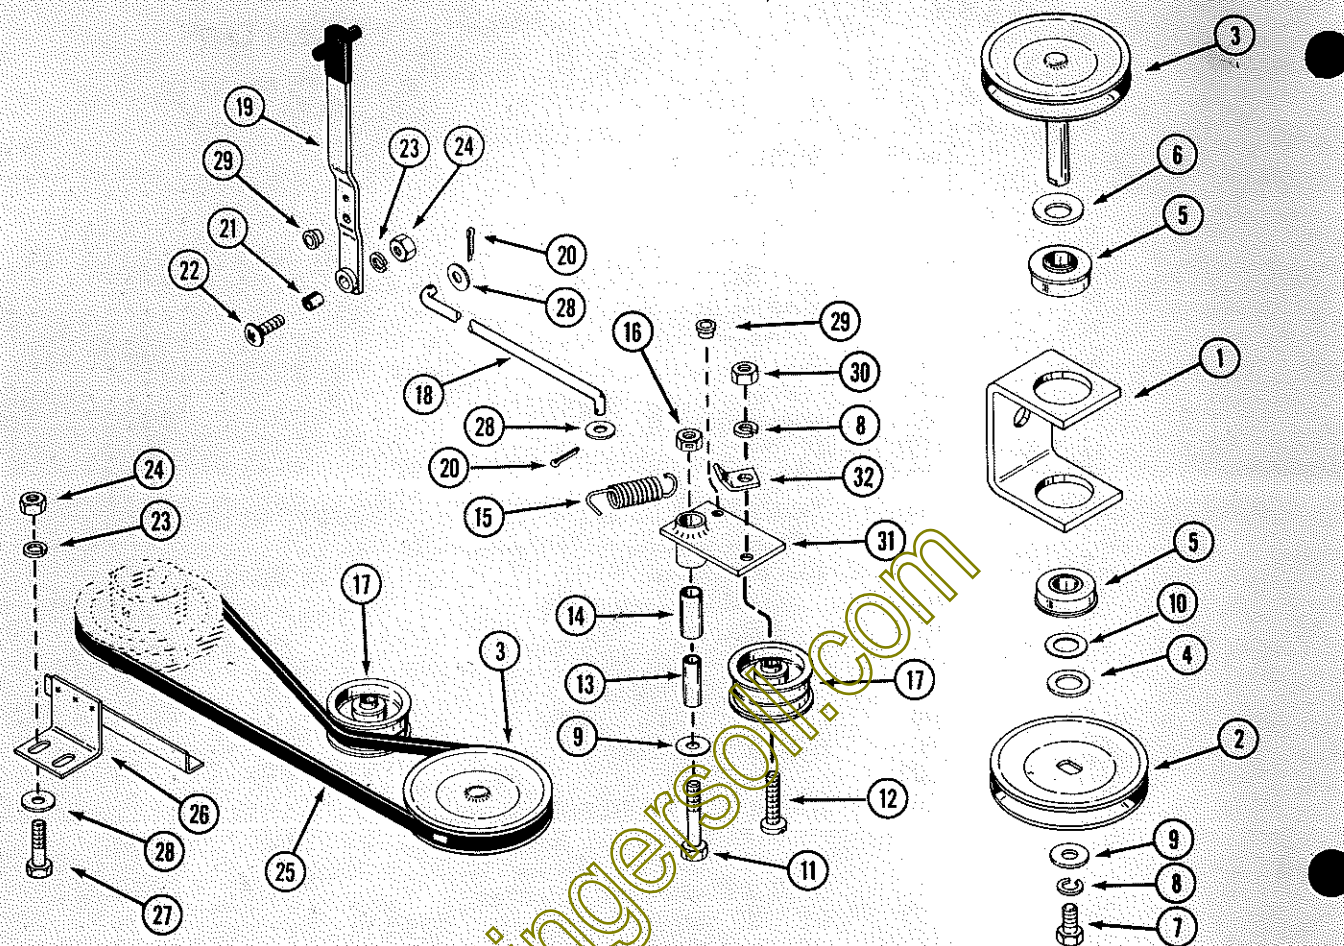

CASE MODEL 118 COMPACT TRACTOR **DIFFERENTIAL AND FINAL DRIVE**

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 15788	PINION - bevel	2
2	C 15808	GEAR - bevel	2
3	C 11173	PIN - drive	1
4	C 11174	BLOCK - drive	2
5	C 15812	CARRIER - differential	1
6	C 15811	CARRIER - differential	1
7	C 11172	GEAR - ring	1
8	C 15786	AXLE - L.H.	1
9	C 15787	AXLE - R.H.	1
10	F 19633	BEARING - thrust	2
11	C 11178	WASHER - thrust	8
12	C 11222	RING - retaining	1
13	13- 436	BOLT - 1/4" x 2-1/4" NC hex	4
14	92- 4	LOCKWASHER - 1/4"	4
15	C 15813	HOUSING - differential	1
16	C 16005	BEARING - needle	2
17	C 16006	BEARING - needle	1
18	C 15814	COVER - differential housing	1
		BEARING - needle (see Ref. 16)	1
19	C 16007	BEARING - needle	1
20	C 15803	HOUSING AND BUSHING ASSEMBLY - L.H.	1
21	C 15807	BUSHING	2
22	C 15804	HOUSING AND BUSHING ASSEMBLY - R.H.	1
		BUSHING - (see Ref. 21)	2
23	C 15815	SHAFT - brake	1
24	C 15816	GASKET - housing to cover	1
25	C 11193	GEAR - output	1
26	C 11187	GEAR - idler	1
27	C 15802	SHAFT - output	1
28	C 15801	SPACER	1
29	C 11205	WASHER	1
30	C 16009	WASHER	1
31	C 11195	SEAL - oil	2
32	F 53650	PIN - dowel	2
33	187- 996	SCREW - 1/4" x 1" NC hex head, self-tapping	10
34	221- 13	PLUG - oil filler and drain	2
35	C 15134	BOLT - "U" 5/16"	2
36	192- 20	LOCKWASHER - 5/16" ZP	4
37	129- 102	NUT - 5/16" NC hex, ZP	4
38	195- 104	WASHER - 3/8" flat	2
39	192- 21	LOCKWASHER - 3/8"	2
40	113- 206	BOLT - 3/8" x 3/4" NC hex	2

1-#3 C 20185 pulley assy PTO top
1-#6 C 15272 washer - bell




29

**CASE MODEL 118 COMPACT TRACTOR
ATTACHMENT DRIVE
POWER TAKE OFF (PTO) ASSEMBLY**

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 18621	HOUSING - PTO	1
2	C 15083	PULLEY - PTO bottom	1
3	C 20185	PULLEY ASSEMBLY - PTO top	1
4	C 10822	WASHER - plain	1
5	C 18915	BEARING - PTO	2
6	C 15272	WASHER - bell	1
7	113- 206	BOLT - 3/8" x 3/4" NC hex, ZP	1
8	192- 21	LOCKWASHER - 3/8" ZP	2
9	195- 104	WASHER - 3/8" plain, ZP	3
10	A 30881	WASHER - spacer	UAR
11	113- 213	BOLT - 3/8" x 2-1/4" NC hex	1
12	182- 286	SCREW - pan head 3/8" x 1-3/4" NC	1
13	C 17108	SLEEVE - inner	1
14	C 16714	BUSHING - bearing	1
15	C 18716	SPRING - PTO	1
16	131- 179	NUT - 3/8" NC hex lock	1
17	C 15672	PULLEY - idler	1
18	C 18608	ROD - PTO	1
19	C 19015	LEVER - engaging	1
20	132- 46	PIN - cotter 1/8" x 3/4"	1
21	C 15527	SPACER	1
22	175- 415	SCREW - 5/16" x 1" truss head, ZP	1
23	192- 20	LOCKWASHER - 5/16" ZP	3
24	129- 102	NUT - 5/16" NC hex, ZP	3
25	C 19171	BELT - PTO	1
26	C 15252	KEEPER - belt	2
27	113- 102	BOLT - 5/16" x 3/4" NC hex	2
28	195- 521	WASHER - 5/16"	3
29	C 20475	BUSHING - nylon	2
30	129- 103	NUT - 3/8" NC hex	1
31	C 18607	ARM - idler	1
32	C 15545	BRACKET - spring attaching	1

IMPLEMENT LIFT

1	C 19044	LEVER - implement lift	1
2	C 19172	ROD - push	1
3	C 14525	BUTTON - thumb	1
4	C 15156	BRACKET - saddle	2
5	113- 102	BOLT - 5/16" x 3/4" NC hex, ZP	4
6	192- 20	LOCKWASHER - 5/16" ZP	1

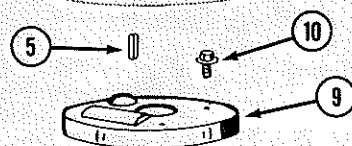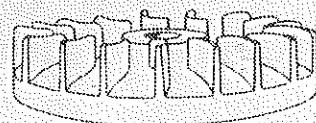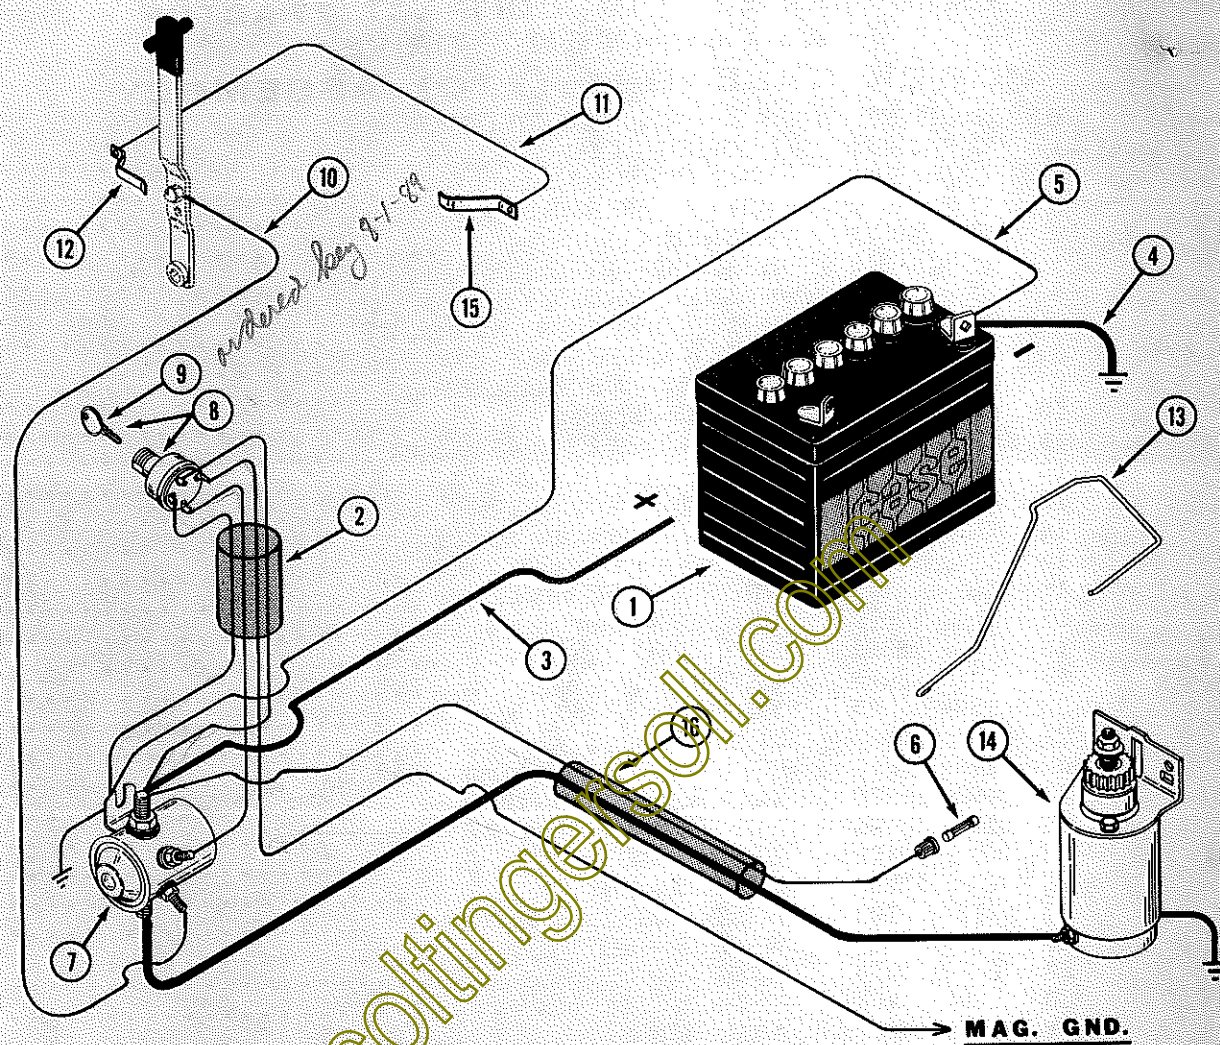



CASE MODEL 118 COMPACT TRACTOR

ELECTRICAL SYSTEM

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 10458	BATTERY - 12 volt	1
2	C 18677	HARNESS - wire	1
3	C 14565	CABLE - battery positive (red 10-1/2")	1
4	C 14566	CABLE - battery negative (black 12"	1
5	C 17685	WIRE - battery negative to solenoid case	1
6	223- 7	FUSE - 7.5 amp.	1
7	C 14553	SOLENOID - start	1
8	C 18816	SWITCH - ignition, includes key	1
9	C 17763	KEY - ignition	1
10	C 18203	WIRE - solenoid to PTO safety switch	1
11	C 19055	WIRE - PTO safety switch to clutch switch	1
12	C 18182	SWITCH - strip PTO & clutch	2
13	C 15114	CLAMP - battery hold down	1
14	BR 390307	STARTER - engine, 12 volt (repairs page 33)	1
14	C 22701	STARTER - engine, 12 volt (repairs page 33B)	1
14	C 22702	STARTER - engine, 12 volt (repairs page 33B)	1
15	C 19453	SWITCH - strip	1
16	C 21634	HARNESS - wire	1

BREAKER CONTACTS

	BR 299061	KIT - ignition	1
-1	BR 294628	POINTS AND CONDENSER	1
-2	BR 26018	SPRING - breaker arm	1
-3	BR 260374	SPRING - connector, condenser	1
-4	BR 65704	PLUNGER - breaker point	1
5	BR 61760	KEY - flywheel, zinc	1
-6	BR 93381	SCREW - breaker arm mounting	1
-7	BR 220477	CLAMP - condenser mounting	1
-8	BR 93042	SCREW - condenser mounting	1
-9	BR 222117	COVER - breaker point	1
-10	187- 1041	SCREW - sems, cover	2

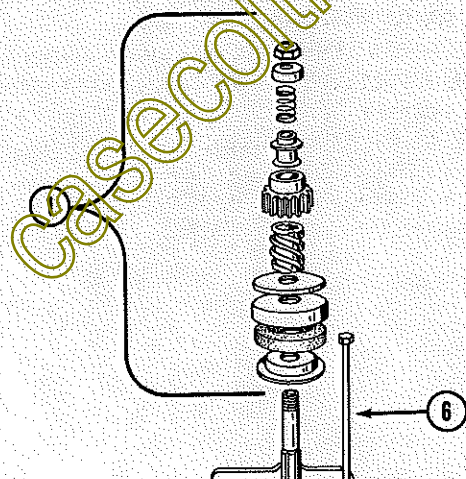
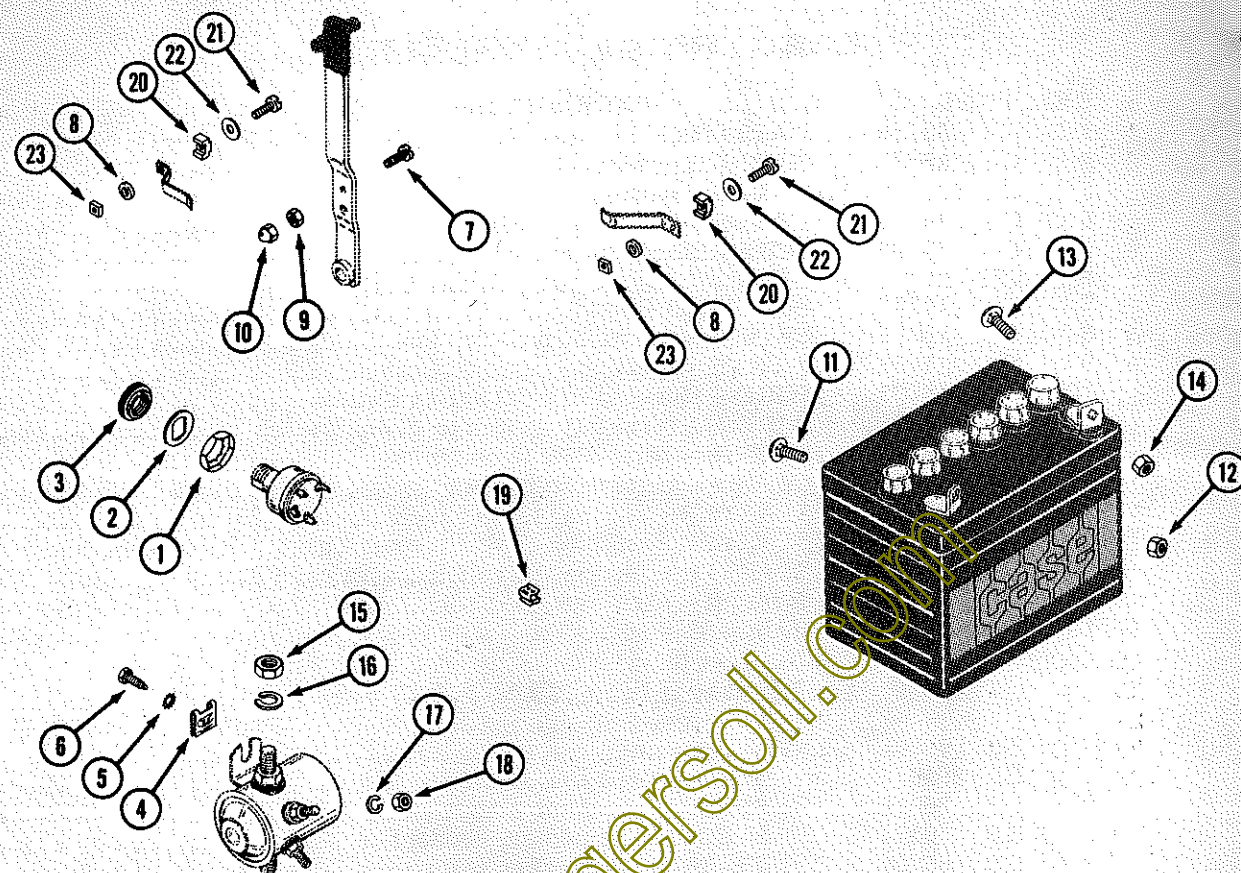


CASE MODEL 118 COMPACT TRACTOR **ELECTRICAL SYSTEM HARDWARE**

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 14060	NUT - back up	1
2	C 17426	WASHER - ignition switch	1
3	C 17921	NUT - escutcheon	1
4	C 10836	NUT - speed	2
5	193- 70	LOCKWASHER - #10 external tooth	2
6	187- 484	SCREW - #10 x 1/2" self-tapping hex	2
7	C 18204	SCREW - #10 x 1/4" binder hd. nylon	1
8	195- 513	WASHER - # 10	2
9	C 15704	NUT - # 10 NC hex, nylon	1
10	129- 642	NUT - # 10 acorn	1
11	111- 202	BOLT - 5/16" x 3/4" round head, square neck	1
12	129- 102	NUT - 5/16" NC hex	1
13	111- 108	BOLT - 1/4" x 3/4" round head, square neck	1
14	129- 101	NUT - 1/4" NC hex	1
15	129- 122	NUT - 5/16" NF hex	2
16	192- 20	LOCKWASHER - 5/16"	2
17	192- 18	LOCKWASHER - 3/16"	2
18	129- 27	NUT - # 10 hex	2
19	C 19521	CLIP - wire holder	2
20	C 19246	HOLDER - strip switch	2
21	182- 523	SCREW - # 10 x 7/8" pan head	2
22	C 19254	WASHER - 13/64" nylon	2
23	129- 77	NUT - # 10 square	2

BR 390307 STARTER - MITSUBISHI

	BR 390307	MOTOR - starting, 12V. Mitsubishi, (Model MMD-SML)	1
1	BR 299963	DRIVE ASSEMBLY	1
2	BR 390454	CAP ASSEMBLY - drive end (includes bearing & bracket) ...	1
3	BR 390456	ARMATURE ASSEMBLY - (includes washers)	1
4	BR 390452	HOUSING - (starter includes field coils)	1
5	BR 390455	CAP ASSEMBLY - commutator end (includes bushing, brushes and springs)	1
6	BR 299962	BOLT - thru (includes nuts and lockwashers)	2
7	BR 390990	BRUSH ASSEMBLY	1

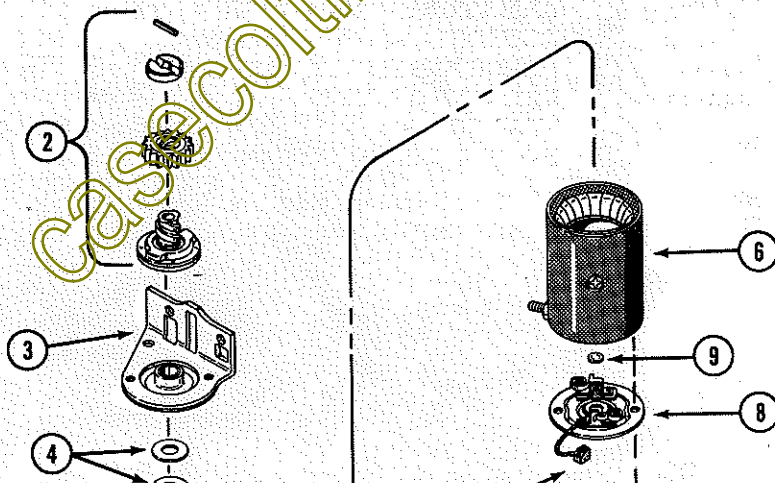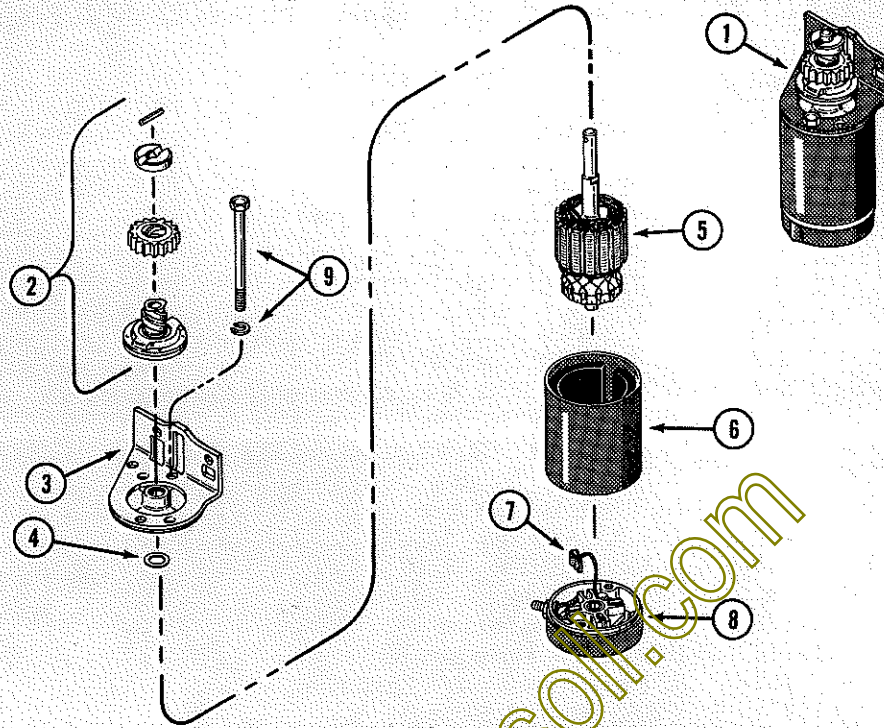


STARTER MOTOR - AMERICAN BOSCH

REF.	PART NO	DESCRIPTION	REQ'D
1	C 22701	MOTOR - starting 12V. Bosch (Model 01965-23-MO-30-SM) . . .	1
2	BR 391461	DRIVE ASSEMBLY - starter	1
3	BR 390444	END CAP ASSEMBLY - drive end, Bosch	1
4	NSS	WASHER - thrust (retain old washer for service)	1
5	BR 391607	ARMATURE - starter, Bosch	1
6	BR 390447	HOUSING - starter, Bosch	1
7	BR 390449	BRUSH ASSEMBLY - Bosch	1
8	BR 390448	END CAP ASSEMBLY - com. end, Bosch	1
9	BR 390450	BOLT - thru - Bosch (includes washer)	2

STARTER MOTOR - MITSUBISHI

1	C 22702	MOTOR - starting 12V. Mitsubishi (Model M00IT02271)	1
2	BR 391461	DRIVE ASSEMBLY - starter	1
3	BR 391585	END CAP ASSEMBLY - drive end, Mitsubishi	1
4	NSS	WASHER - thrust (retain old washers for service)	2
5	BR 391584	ARMATURE - starter, Mitsubishi	1
6	BR 390452	HOUSING - starter, Mitsubishi	1
7	BR 390990	BRUSH ASSEMBLY - Mitsubishi	1
8	BR 390455	END CAP ASSEMBLY - com. end (includes brush set)	1
9	NSS	SPACER - starter (retain old spacer for service)	1
10	BR 93771	BOLT - thru, Mitsubishi	2

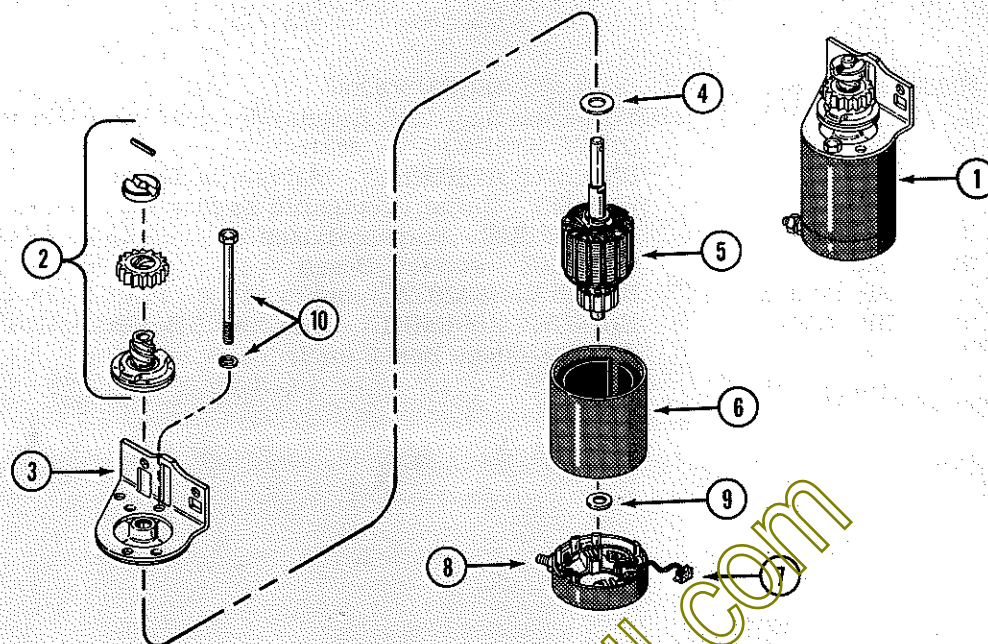

118 hydraulic drive

case

hydraulic drive **118**



CASE MODEL 118 COMPACT TRACTOR

STARTER MOTOR - BRIGGS

REF.	PART NO.	DESCRIPTION	REQ'D
1	C 22709	MOTOR - starting 12 V. Briggs	1
2	BR 391461	DRIVE ASSEMBLY - starter	1
3	BR 390825	END CAP ASSEMBLY - starter (includes items 4 & 9) ...	1
4	NSS	WASHER - thrust (see item 3 or 8)	1
5	BR 390837	ARMATURE - starter, Briggs	1
6	BR 390849	HOUSING - starter, Briggs	1
7	BR 391705	BRUSH ASSEMBLY - starter	1
8	BR 390846	END CAP ASSEMBLY - com. end (includes brush set) ...	1
9	NSS	SPACER - (see item 3 or 8)	1
10	BR 391706	BOLT ASSEMBLY - thru (includes washer)	2

DECALS

REF.	PART NO.	DESCRIPTION	REQ'D
1	321- 2474	DECAL - R.H.	1
2	321- 2475	DECAL - L.H.	1
3	321- 2477	DECAL - instrument panel	1
4	C 18186	DECAL - PTO	1
5	C 15658	DECAL - brake lock	1
6	321- 2487	DECAL - "Caution" (optional)	1

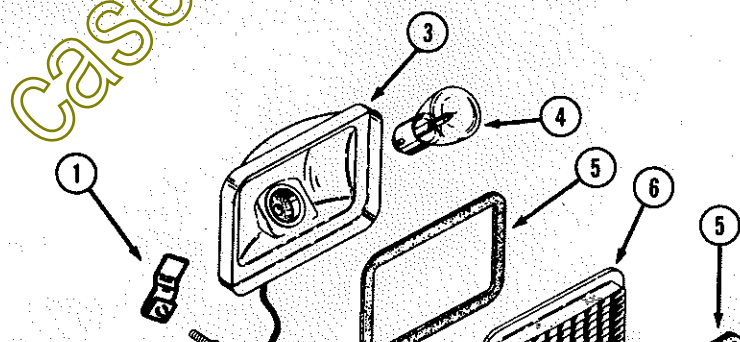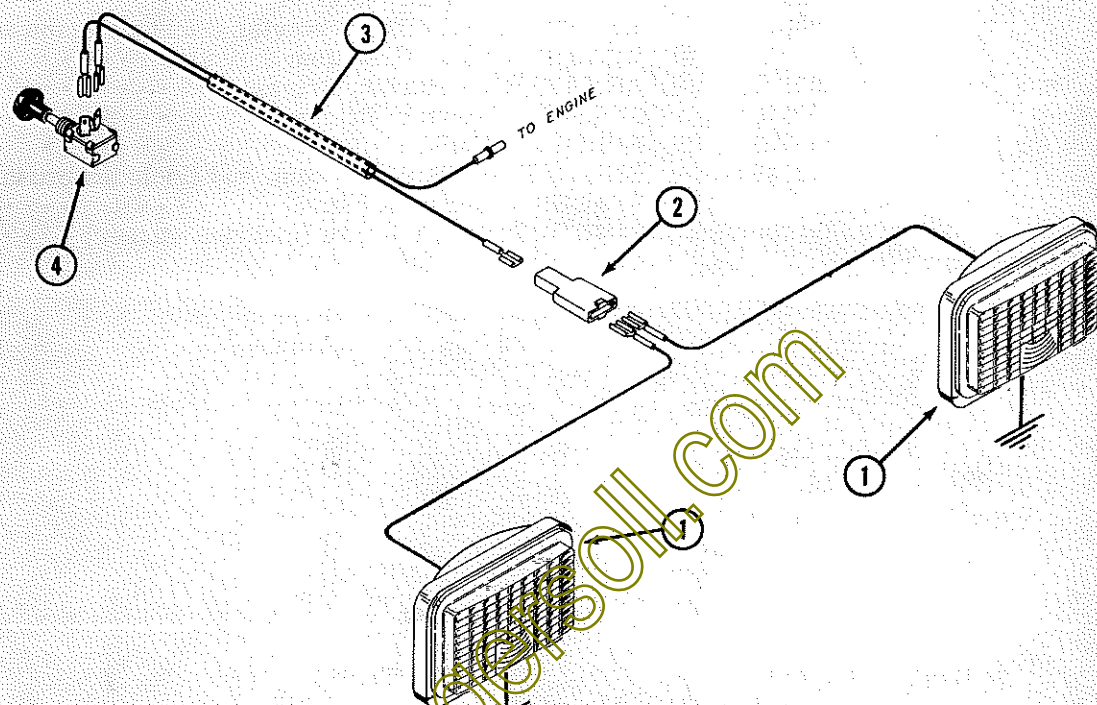

CASE MODEL 118 COMPACT TRACTOR **HEAD LAMP KIT(OPTIONAL)**

REF.	PART NO.	DESCRIPTION	REQ'D
	NSS	KIT - head lamp (order as J6 machinery item)	1
1	C 14302	HEAD LAMP	2
2	C 14537	CONNECTOR - head lamp	1
3	C 19177	HARNESS - wire	1
4	C 19222	SWITCH - headlight	1
	321- 2484	DECAL - lights	1

HEAD LAMP

1	131- 629	NUT - speed	4
2	187- 1047	SCREW - #8 x 1/2" round head, Phillips, self-tapping	4
	C 14302	HEAD LAMP ASSEMBLY	2
3	NSS	RECEPTACLE - head lamp (order C14302)	1
4	C 14305	BULB - head lamp	1
5	C 14304	GASKET - head lamp	2
6	C 14303	LENS - head lamp	1

casecoltingersoil.com

NUMERICAL INDEX

PART NO.	PAGE NO.	REF. NO.	PART NO.	PAGE NO.	REF. NO.	PART NO.	PAGE NO.	REF. NO.
A 27795	5	35	BR 221796	7	49	BR 299572	5	16
A 30881	21	9	BR 221885	7	74	BR 299577	9	-
A 30881	29	10	BR 221898	5	36	BR 299650	13	16
A 37247	25	28	BR 221901	9	97	BR 299707	13	18
A 62549	25	15	BR 221907	9	89	BR 299740	13	24
BR 23108	13	7	BR 221986	13	15	BR 299762	13	13
BR 26018	31	2	BR 221995	13	20	BR 299848	7	40
BR 26157	13	6	BR 222010	13	12	BR 299852	13	31
BR 26828	5	30	BR 222014	13	22	BR 299962	33	6
BR 27590	13	3	BR 222027	13	26	BR 299963	33	1
BR 27750	5	13	BR 222114	5	21	BR 390180	7	46
BR 27803	5	23	BR 222117	5	38	BR 390233	9	93
BR 61760	7	47	BR 222117	31	9	BR 390307	31	14
BR 61760	31	5	BR 222211	7	80	BR 390307	33	-
BR 65704	31	4	BR 222212	7	83	BR 390347	5	15
BR 65906	5	29	BR 222263	7	75	BR 390348	5	15
BR 66068	7	70	BR 222277	7	52	BR 390349	5	15
BR 66538	9	90	BR 230759	5	33	BR 390350	5	15
BR 66554	7	69	BR 230896	13	11	BR 390379	11	12
BR 66768	5	6	BR 230927	5	5	BR 390380	5	2
			BR 230932	13	25	BR 390402	5	20
BR 91920	7	67	BR 230976	7	78	BR 390419	5	24
BR 91920	13	9	BR 260374	31	3	BR 390444	33B	3
BR 92659	5	22	BR 260584	7	66	BR 390447	33B	6
BR 93038	13	8	BR 260933	5	31	BR 390448	33B	8
BR 93042	7	50	BR 260971	7	53	BR 390449	33B	7
BR 93042	31	8	BR 261038	5	9	BR 390450	33B	9
BR 93158	9	96	BR 261055	5	27	BR 390452	33	4
BR 93163	5	37	BR 261116	13	29	BR 390452	33B	6
BR 93210	7	44	BR 261128	7	54	BR 390454	33	2
BR 93211	7	45	BR 261117	7	55	BR 390455	33	5
BR 93323	11	15	BR 270382	13	28	BR 390455	33B	8
BR 93357	13	1	BR 270430	5	19	BR 390456	33	3
BR 93381	9	88	BR 270511	13	21	BR 390640	5	1
BR 93381	31	6	BR 270528	11	13	BR 390662	7	56
BR 93410	9	94	BR 270538	5	7	BR 390684	13	23
BR 93438	7	84	BR 270538	11	17	BR 390693	7	77
BR 93496	7	60	BR 270538	13	14	BR 390811	11	8
BR 93536	7	42	BR 270539	11	16	BR 390825	35	3
BR 93536	7	81	BR 280005	7	41	BR 390837	35	5
BR 93572	7	58	BR 292260	5	26	BR 390846	35	8
BR 93572	13	27	BR 292681	13	5	BR 390849	35	6
BR 93585	5	14	BR 294606	5	4	BR 390892	9	85
BR 93621	7	79	BR 294628	31	1	BR 390918	7	73
BR 93621	9	86	BR 295840	5	17	BR 390990	33	7
BR 93622	11	14	BR 295841	5	17	BR 390990	33B	7
BR 93630	5	25	BR 295962	5	3	BR 391461	33B	2

NUMERICAL INDEX

39

PART NO.	PAGE NO.	REF. NO.	PART NO.	PAGE NO.	REF. NO.	PART NO.	PAGE NO.	REF. NO.
C 11174	27	4	C 15511	25	6	C 17866	23	16
C 11178	27	11	C 15519	11	1	C 17921	33	3
C 11187	27	26	C 15526	11	6	C 18015	19	3
C 11193	27	25	C 15527	29	21	C 18016	19	1
C 11195	27	31	C 15534	25	14	C 18017	19	18
C 11205	27	29	C 15540	11	10	C 18182	31	12
C 11222	27	12	C 15545	23	15	C 18186	35	4
C 11529	11	18	C 15545	29	32	C 18203	31	10
C 11545	11	19	C 15546	25	2	C 18204	33	7
C 11906	21	5	C 15549	25	17	C 18205	15	11
C 11942	25	30	C 15564	29	9	C 18206	11	9
C 12093	25	29	C 15584	25	3	C 18207	25	1
C 12110	21	2	C 15585	25	4	C 18209	25	16
C 12111	21	3	C 15597	25	24	C 18210	25	18
C 12370	21	5	C 15610	17	2	C 18233	25	38
C 12975	19	20	C 15658	35	5	C 18468	23	2
C 12975	21	8	C 15672	29	17	C 18479	15	1
C 13012	23	11	C 15704	33	9	C 18607	29	31
C 13106	21	7	C 15786	27	8	C 18608	29	18
C 13716	21	11	C 15787	27	9	C 18621	29	1
C 14060	33	1	C 15788	27	1	C 18626	21	18
C 14201	19	19	C 15801	27	28	C 18661	15	-
C 14302	37	-	C 15802	27	27	C 18662	15	4
C 14302	37	1	C 15803	27	20	C 18664	15	3
C 14303	37	6	C 15804	27	22	C 18670	15	2
C 14304	37	5	C 15807	27	21	C 18677	31	2
C 14305	37	4	C 15808	27	2	C 18695	23	17
C 14525	29	3	C 15811	27	6	C 18702	17	9
C 14534	17	4	C 15812	27	5	C 18716	29	15
C 14537	37	2	C 15813	27	15	C 18816	31	8
C 14553	31	7	C 15814	27	18	C 18837	25	22
C 14565	31	3	C 15815	27	23	C 18839	25	35
C 14566	31	4	C 15816	27	24	C 18915	29	5
C 14900	25	25	C 16005	27	16	C 19008	13	7
C 15066	21	1	C 16006	27	17	C 19012	13	1
C 15067	21	11	C 16007	27	19	C 19015	29	19
C 15068	21	13	C 16009	27	30	C 19044	29	1
C 15083	29	2	C 16129	17	1	C 19055	31	11
C 15090	21	1	C 16245	19	7	C 19069	15	12
C 15093	21	6	C 16714	29	14	C 19072	23	22
C 15096	19	4	C 16724	21	3	C 19073	13	6
C 15097	19	5	C 16739	23	3	C 19107	23	8
C 15104	19	12	C 16752	13	3	C 19112	15	17
C 15105	19	13	C 16752	23	18	C 19118	17	5
C 15106	23	1	C 16898	25	37	C 19171	29	25
C 15113	21	12	C 16946	21	2	C 19172	29	2
C 15114	31	13	C 16948	21	17	C 19177	37	3
C 15116	15	19	C 17038	15	16	C 19222	37	4

NUMERICAL INDEX

PART NO.	PAGE NO.	REF. NO.	PART NO.	PAGE NO.	REF. NO.	PART NO.	PAGE NO.	REF. NO.
F 19633	27	10	129- 325	21	16	192- 23	21	14
F 53650	27	32	129- 504	11	4	193- 25	7	68
L 32763	23	9	129- 642	33	10	193- 53	25	23
M 20677	9	91	131- 69	23	18	193- 70	33	5
T 25070	23	24	131- 165	25	31	195- 102	13	11
T 33565	21	20	131- 176	23	11	195- 104	23	6
HARDWARE CODE NUMBERS			131- 178	23	7	195- 104	27	38
11- 312	7	63	131- 178	25	21	195- 104	29	9
13- 436	27	13	131- 179	29	16	195- 513	33	8
41- 24	13	2	131- 629	37	1	195- 521	19	16
92- 4	27	14	131- 1113	19	2	195- 521	23	19
111- 108	33	13	131- 1115	13	8	195- 521	25	33
111- 202	19	8	131- 1127	21	19	195- 521	29	11
111- 202	33	11	132- 26	23	10	195- 521	29	28
113- 2	13	9	132- 46	29	20	195- 525	23	10
113- 2	25	9	132- 48	23	12	195- 541	23	22
113- 3	13	12	132- 311	21	10	195- 2012	25	7
113- 4	15	13	132- 320	25	34	195- 2029	21	8
113- 102	17	6	136- 103	5	34	195- 2069	19	11
113- 102	23	5	138- 51	25	13	214- 4	25	19
113- 102	23	17	138- 92	23	15	214- 103	11	7
113- 102	29	5	138- 92	29	8	219- 10	21	4
113- 102	29	27	138- 251	13	10	219- 17	19	14
113- 103	15	5	138- 2040	21	23	219- 404	21	6
113- 103	19	15	138- 2054	29	10	221- 13	5	8
113- 103	21	22	138- 2055	21	4	221- 13	27	34
113- 122	17	3	164- 543	13	2	223- 7	31	6
113- 206	15	21	173- 216	11	3	321- 2474	35	1
113- 206	27	40	175- 415	29	22	321- 2475	35	2
113- 206	29	7	178- 858	23	3	321- 2477	35	3
113- 207	15	8	178- 858	23	21	321- 2484	37	-
113- 207	21	10	178- 858	25	26	321- 2487	35	6
113- 213	29	11	182- 286	29	12			
113- 219	23	4	182- 523	33	21			
113- 241	25	11	187- 484	33	6			
126- 16	19	8	187- 996	27	33			
126- 16	23	2	187- 1036	15	18			
126- 21	21	7	187- 1041	5	39			
126- 109	25	5	187- 1041	31	10			
129- 6	7	71	187- 1047	11	11			
129- 7	7	64	187- 1047	37	2			
129- 27	33	18	192- 18	33	17			
129- 77	33	23	192- 19	13	10			
129- 101	15	15	192- 19	15	14			
129- 101	33	14	192- 19	25	8			
129- 102	13	5	192- 20	13	4			
			192- 20	15	6			

casecollectingersoll.com