




E-Z Adjust Clutch

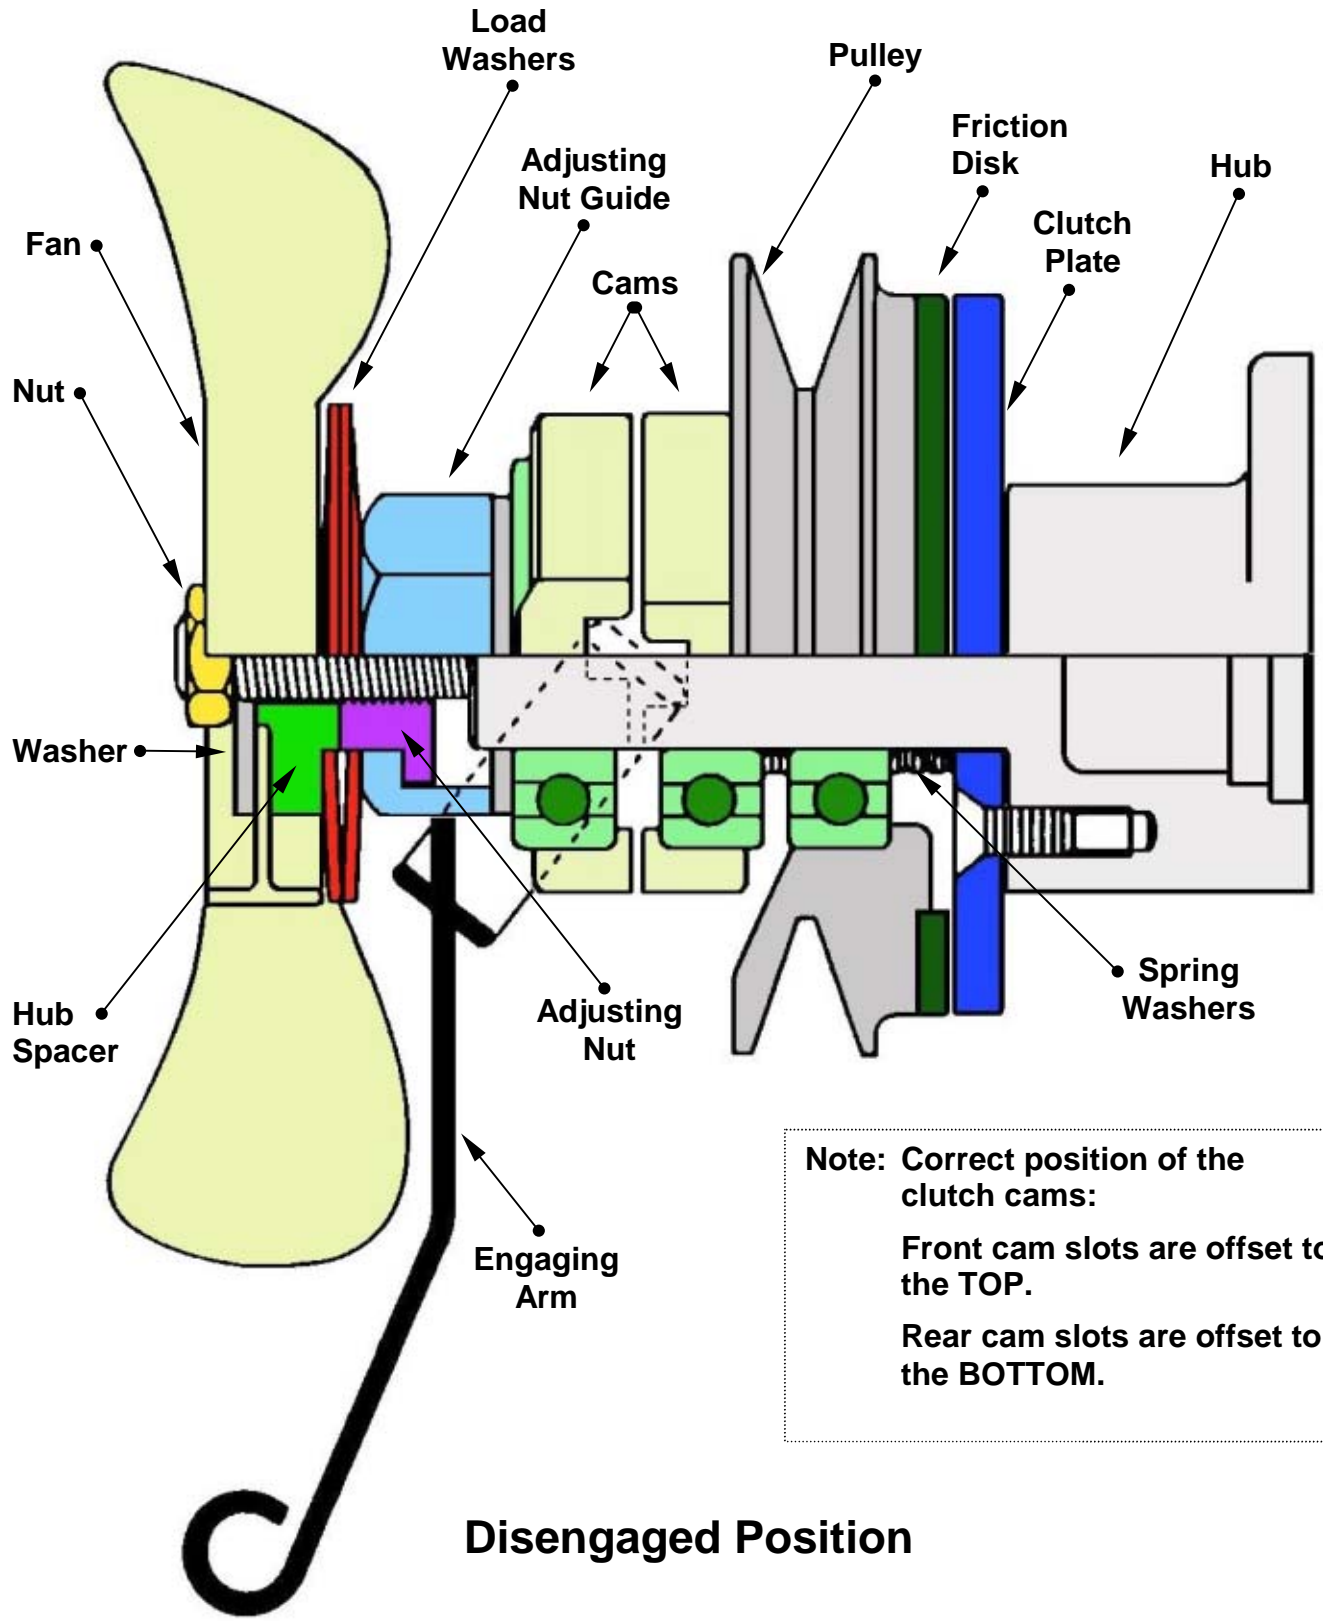


Note: Correct position of the clutch cams:
Front cam slots are offset to the TOP.
Rear cam slots are offset to the BOTTOM.

Disengaged Position



E-Z Adjust Clutch

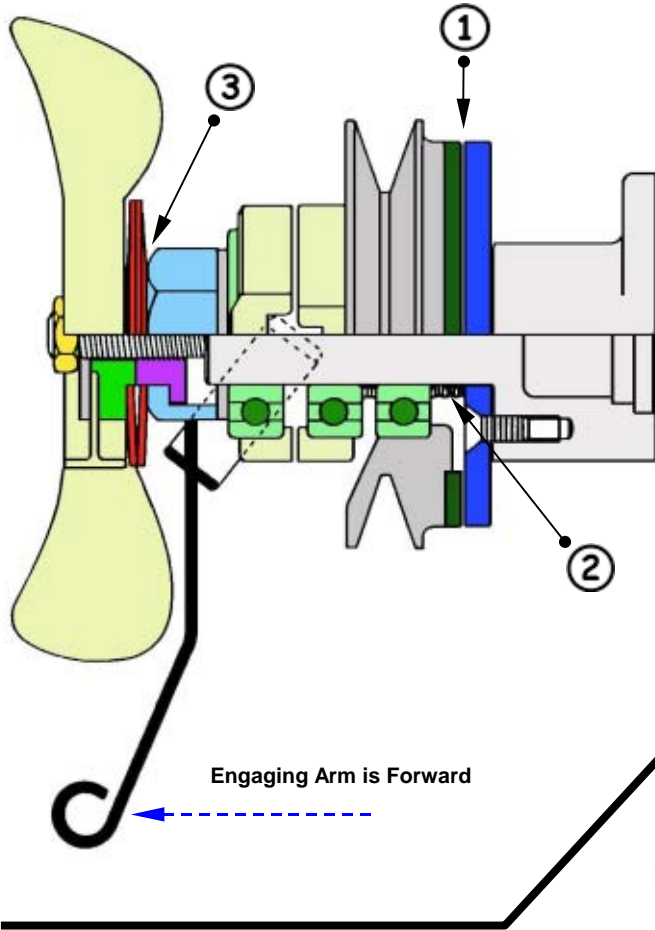

Disengaged


1. Adjust the clutch according to the instructions provided in the "E-Z Adjust Clutch Service Manual" to provide between .002" to .007" clearance between the **Friction Disk** (Dark Green) and the **Clutch Plate** (Dark Blue).
2. When disengaged, the **Spring Washers** push the **Friction Disk** away from the **Clutch Plate**.
3. The **Load Washers** (Red) push the **Adjusting Nut Guide** (Light Blue) against the **Adjusting Nut** (Purple)

Engaging Arm is Forward

Engaged

1. When engaged, the **Engaging Arm** pushes the **Cams** apart.
2. The rear cam pushes the **Friction Disk** against the **Clutch Plate**. (Dark Blue)
3. The front **Cam** pushes the **Adjusting Nut Guide** (Light Blue) against the **Load Springs** (Red) compressing them.

The **Load Springs** act together and hold the **Friction Disk** against the **Clutch Plate** keeping the clutch engaged.

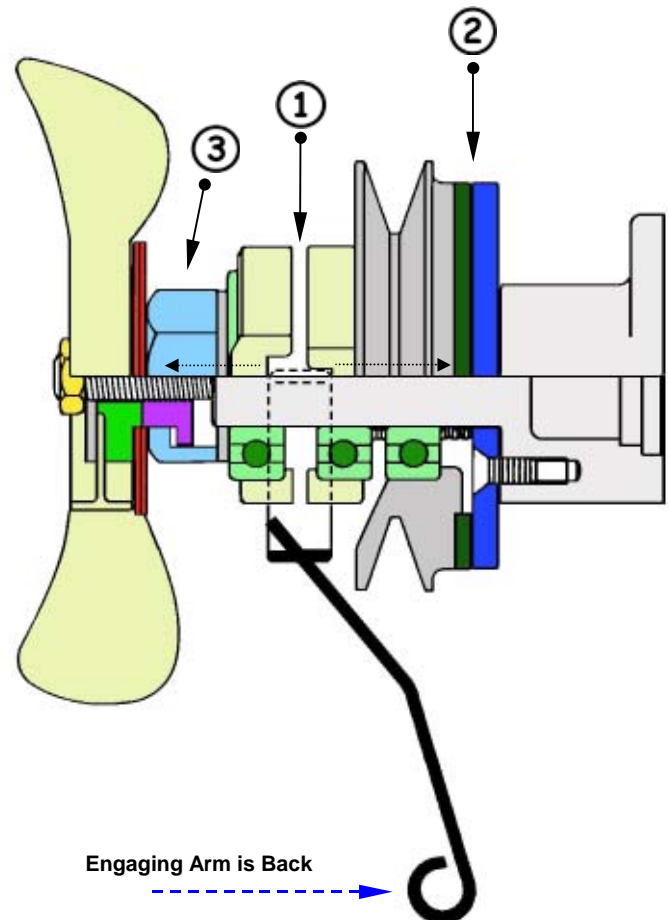

Engaging Arm is Back

INTRODUCTION

The attachment drive clutch is located on the flywheel end of the engine (front of tractor). It is manually actuated. It may be adjusted for friction disc wear by turning an adjustment nut.

NOTE: The terms "right hand", "left hand", "front" and "rear" whenever used in the manual apply to the tractor when facing in the direction the tractor will move in forward operation.



CAUTION: Before attempting to service the Attachment Drive Clutch, be sure to remove tractor key and spark plug wire(s).

CLUTCH DISC CLEARANCE ADJUSTMENT

GAIN ACCESS TO CLUTCH

TRACTORS

1. Remove hood.
2. For tractors with muffler under the hood: Remove three screws securing oil cooler to front support and swing cooler out.

It is not necessary to drain hydraulic oil.

3. For tractors with muffler not under the hood: Remove the four bolts holding the front support to the tractor frame and swing support with cooler and oil reservoir out.

It is not necessary to drain hydraulic oil.

LOADERS

1. Raise loader bucket full height. Block loader lift cylinder with 17" (400 mm) long angle iron to prevent loader from accidentally dropping.
2. Remove grille and headlight panel.
3. Place clean drip pan under return line connection to oil cooler.
4. Loosen return line clamps at both ends of oil cooler.
5. Pull oil cooler free from lower return line connection and rotate cooler around upper hose. Tie cooler up out of way. Use suitable plug to stop return tube from leaking.

ADJUST DISC CLEARANCE

1. Loosen RIGHT HAND THREAD hex nut.
2. Use 1-3/4" open end wrench to turn adjusting nut guide.
 - a. Turn nut in to decrease clearance.
 - b. Turn nut out to increase clearance.
3. Set clearance at .002" to .007" (.05 to .17 mm). Measure clearance with two feeler gauges positioned 180° apart.
4. Hold adjusting nut guide and tighten hex nut to 45 lb. ft. (60 Nm).

If clearance becomes less when tightening hex nut, turn adjusting nut out to increase clearance to proper amount. Hex nut must be tight when adjustment procedure is finished.
5. Reassemble oil cooler and hood.


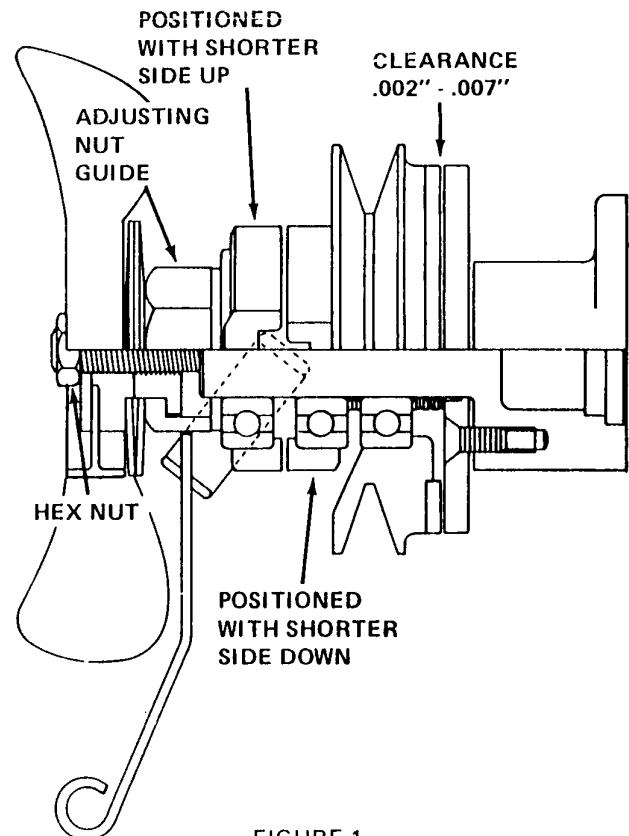


FIGURE 1

CLUTCH REMOVAL

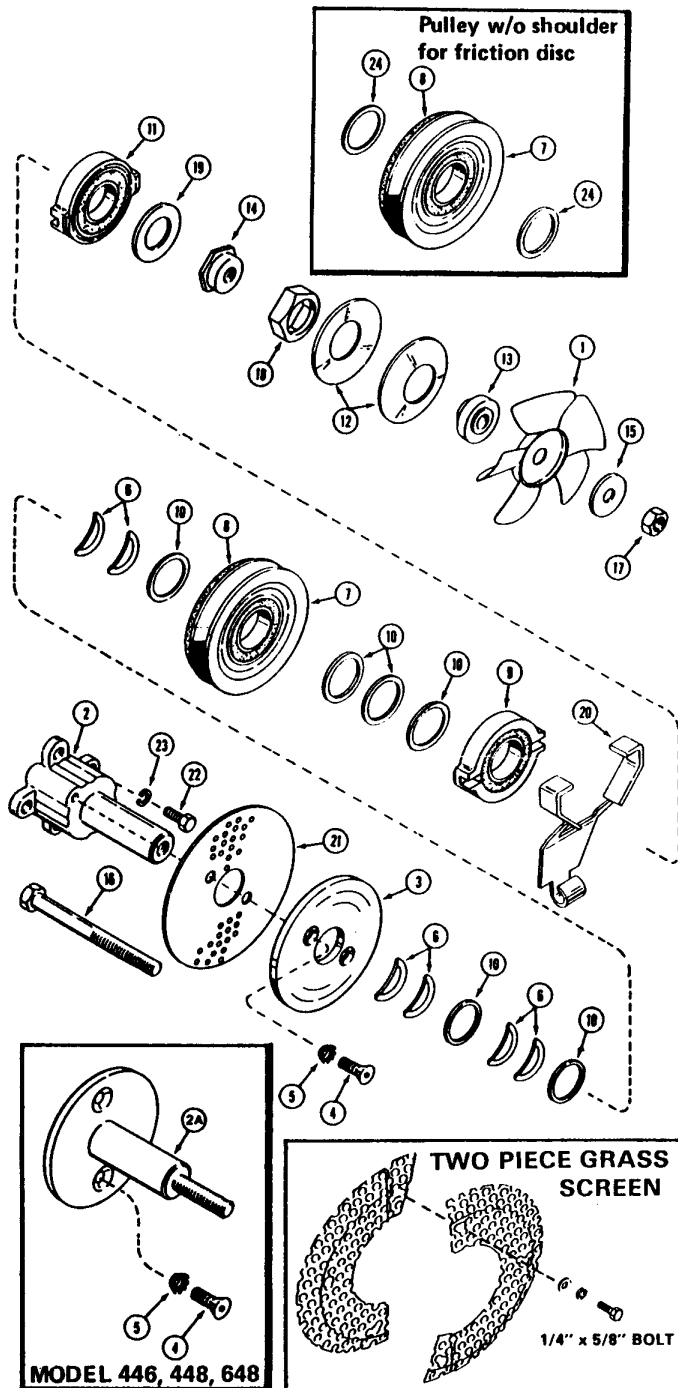

NOTE: If your tractor is equipped with the two piece air screen, the screen can be removed first allowing the removal of the clutch assembly from the flywheel. The complete rebuilding of the clutch can then be done on the bench. If equipped with the one piece air screen, the disassembly and rebuilding must be done on the engine.

1. Follow steps for CLUTCH DISC CLEARANCE ADJUSTMENT...GAIN ACCESS TO CLUTCH.
2. Place clutch in disengaged position. Hold adjusting nut guide (18) stationary and
3. Remove right hand thread hex nut (17).

VERY IMPORTANT:

Adjusting nut guide (18) must be held stationary while removing hex nut (17). Failure to observe this procedure will maintain spring pressure causing hex nut to release with force. This may damage threads or cause injury.

4. Remove:
 - a. Washer (15)
 - b. Fan (1)
 - c. Spacer (13)
 - d. Springs (12)
 - e. Adjusting nut guide (18)
 - f. Adjusting nut (14)
 - g. Spacer (19)
 - h. Cam and bearing assemblies (9 & 11)
 - i. Engaging arm (20)
 - j. (1) Three or four .050" (1.27 mm) spacers (10) or
(2) One .200" (5.08 mm) spacer or
(3) One .100" (2.54 mm) spacer (24) whichever is present
 - k. Pulley and bearing assemblies (7)
 - l. One .100" (2.54 mm) spacers (24) if present
 - m. Three spacer washers (10) and six spring washers (6)
5. Remove machine screws (4) and lockwashers (5). This completes removal on tractors equipped with Onan engines.
6. All Kohler engine equipped models, remove clutch plate (3) and grass screen (21). Remove four bolts (22) and lockwashers (23) and detach drive hub (2) from engine flywheel.
7. Bolt (16) can be replaced, if required, on Kohler engine equipped models.

Figure 2

CLUTCH INSTALLATION

1. All clutches on tractors equipped with Kohler engines:

NOTE: Perform this step first if equipped with one piece air screen and last if equipped with two piece air screen.

- a. Connect the drive hub (2) to the engine flywheel with original four cap screws (22) and new 3/8" lockwashers (23).
 - b. If equipped with one piece air screen: Secure the screen (21) and clutch plate (3) to the drive hub (2) with original machine screws (4) and new lockwashers (5). Tighten the machine screws securely.
 - c. If equipped with two piece air screen: Install the 2-piece air screen so the bottom of the left half overlaps the bottom of the right half and the top of the left half goes under the top of the right half when facing the attachment drive clutch end of the engine.
2. All clutches on tractors equipped with Onan engines: Secure the drive hub (2A) to the flywheel with original machine screws (4) and new lockwashers (5). Tighten the machine screws securely.
 3. Fit two springs (6) together and place on drive hub. Install .050" spacer (10) then match two more springs and install. Place second .050" spacer on hub and install the last two springs and .050" spacer for a total of six springs and three spacers.
 4. Place one .100" (2.54 mm) spacer (24) on shaft if it was removed. See inset.
 5. Place disc, pulley and bearing assembly (7) on clutch hub with disc facing backing plate (3).
 6. Install:
 - (a) Three or four .050" (1.27 mm) spacers (10) or
 - (b) One .200" (5.08 mm) spacer or

(c) One .100" (2.54 mm) spacer (24)

whichever was removed.

7. Place rear cam (9) on drive hub (2) or (2A) so that notch faces out and front cam (11) with notches facing in.
8. Rotate the cams until the lever notches are misaligned as shown in Figure 1. The rear cam on drive hub must be positioned so the shorter side is downward and the front cam must have the shorter side upward.
9. Separate the cams enough to insert the engaging lever. The engaging lever must be installed so the bend for the control rod is toward the front of the tractor.
10. Position spacer (19) on hub (2) or (2A).
11. Thread adjusting nut and guide (14) and (18) on hub. Guide (18) should be against spacer (19). Nut (14) should protrude through guide (18) enough to hold rear spring (12).
12. Front spring (12) should pilot on spacer (13).

NOTE: Be sure springs do not drop from nut (14) and spacer (13) when tightening.

13. Assemble fan, washer and hex nut loosely.
14. Turn hex nut (17) and adjustment nut guide (18) in together until approximately .002" - .007" (.05 - .17 mm) clearance exists between clutch disc (8) and clutch plate (3).


Refer to CLUTCH DISC CLEARANCE ADJUSTMENT Section of this manual.

15. Hold adjusting nut guide and tighten hex nut to 45 lb. ft. (60 Nm).

If clearance becomes less when tightening hex nut, turn adjusting nut out to increase clearance to proper amount. Hex nut must be tight when adjustment procedure is finished.

16. Reassemble oil cooler and hood.

CASE 220, 222, 224, AND 444,

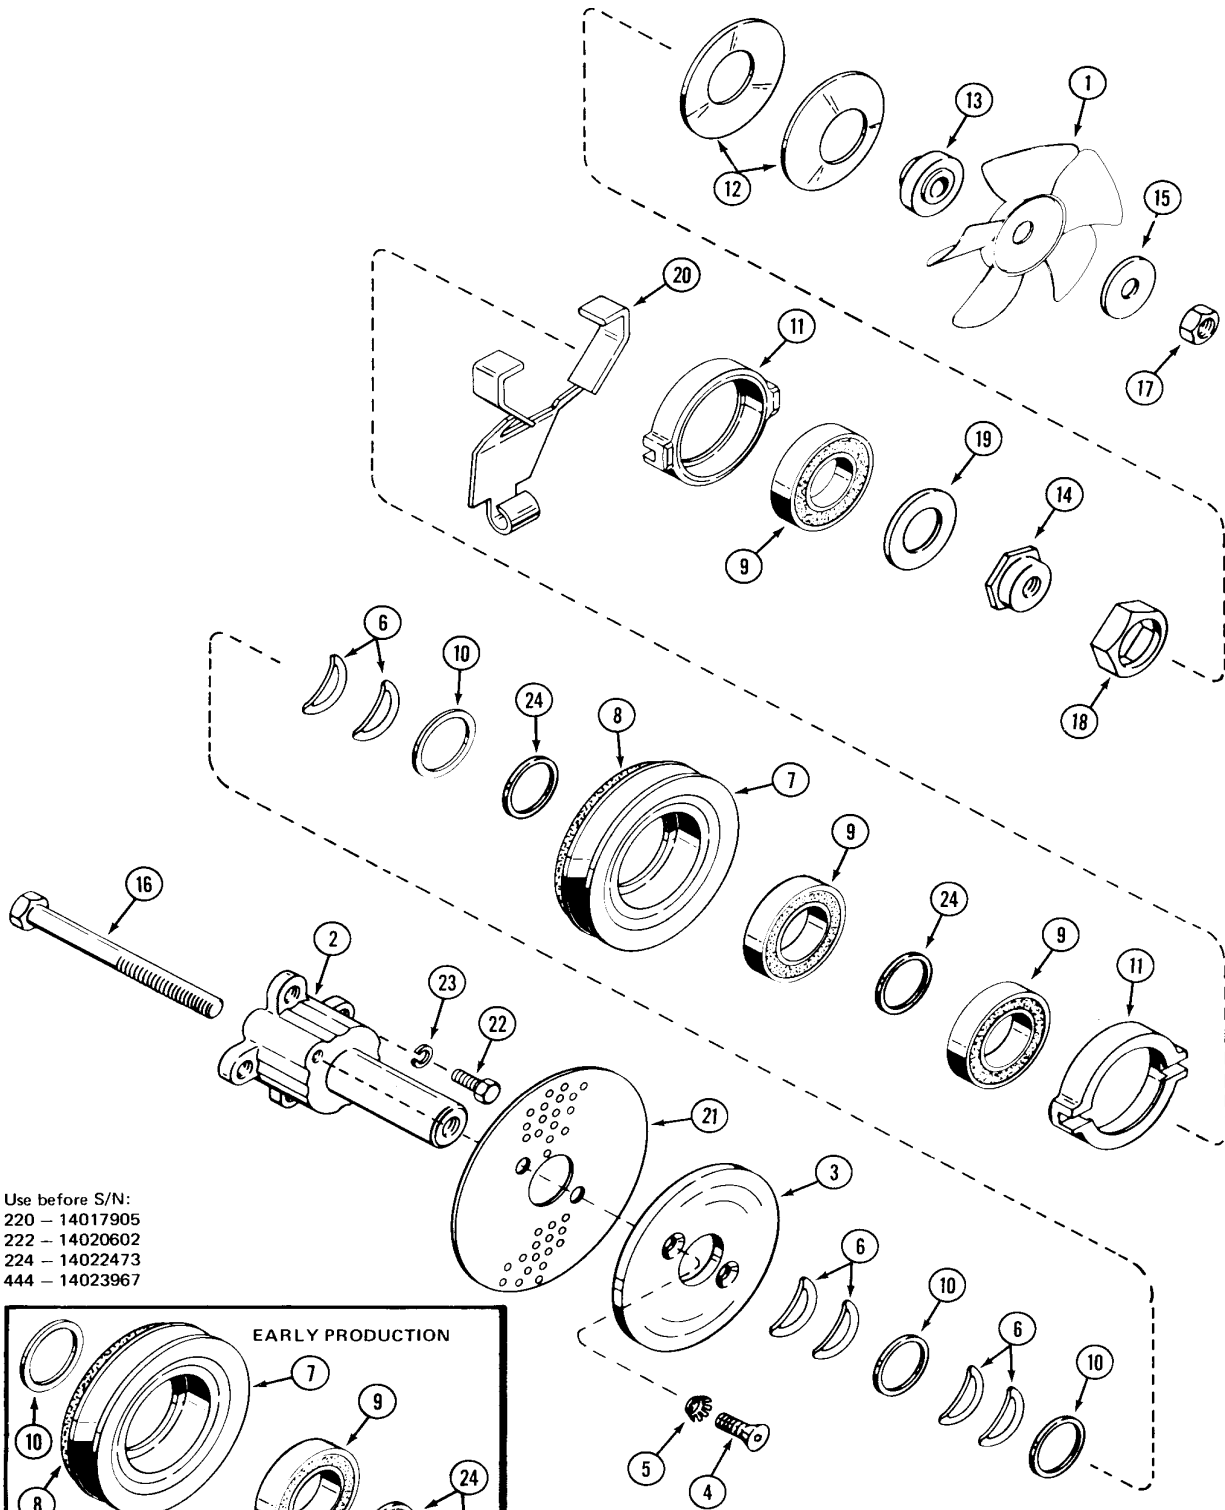

Use before S/N:
 220 - 14017905
 222 - 14020602
 224 - 14022473
 444 - 14023967

EARLY PRODUCTION

NOTE:
 Early production use (2) item 24
 to replace (1) .200" or (3) .050"
 spacers.

CASE 220, 222, 224, AND 444,

CLUTCH ASSEMBLY (PTO)

REF.	PART NO.	DESCRIPTION	REQ'D
	NSS	CLUTCH AND FAN ASSEMBLY (use C27150)	1
1	C 16616	FAN - cooling	1
2	C 23677	HUB - clutch	1
3	C 15718	PLATE - clutch	1
4	164- 40	BOLT - 5/16" - 18 x 3/4"	2
5	193- 76	LOCKWASHER - 5/16" countersunk external tooth	2
6	C 15515	WASHER - spring	6
7	C 26353	KIT - pulley and disc assembly (includes item 24)	1
8	C 23740	KIT - friction disc.	1
9	C 23245	BEARING - ball	3
10	C 15557	WASHER - spacer .050	3
11	C 23033	CAM - clutch	2
12	C 16786	SPRING - clutch load	2
13	C 23630	SPACER - hub.	1
14	C 23625	NUT - adjust	1
15	O 2815N	WASHER - fan 17/32"	1
16	C 24743	BOLT - 1/2" - 20 x 5-1/2" NF	1
17	129- 125	NUT - 1/2" - 20 NF.	1
18	C 23627	GUIDE - adjusting nut	1
19	C 23624	WASHER - spacer	1
20	NSS	ARM - engaging (use C26166)	1
21	NSS	SCREEN - grass (use (2) C26758)	1
22	113- 207	BOLT - 3/8" - 16 x 1" NC.	4
23	192- 21	LOCKWASHER - 3/8".	4
24	C 26346*	SPACER - washer .100" (see note on opposite page for early production) . .	2

* Use S/N and after:

220 - 14017905


222 - 14020602

224 - 14022473

444 - 14023967

On some late production, item 24 is replaced by
(2) .050" spacers. Use item 24 for service.

MODEL 226, 446 AND 448 COMPACT TRACTORS

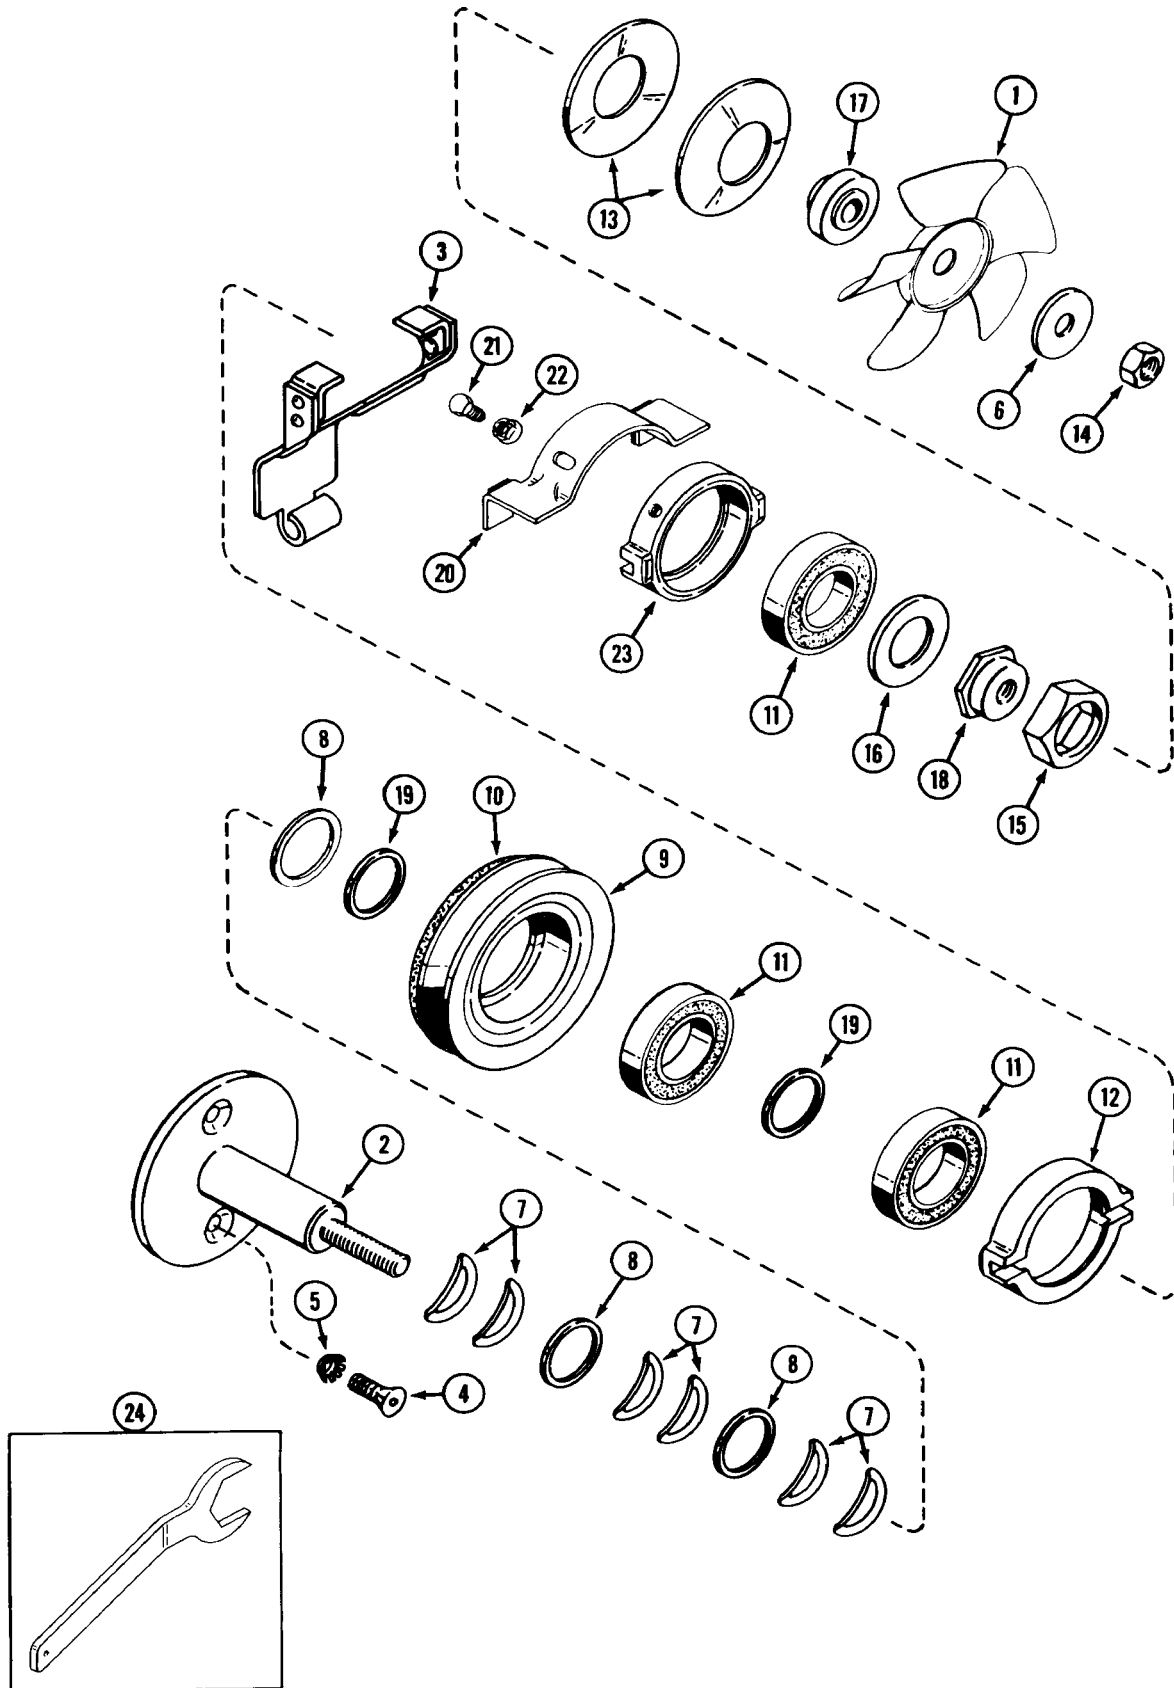

MODEL 226, 446 AND 448 COMPACT TRACTORS

CLUTCH ASSEMBLY (PTO)

REF	PART #	DESCRIPTION	REQ'D
	C 31026	CLUTCH AND FAN ASSEMBLY.....	1
1	C 16616	FAN - cooling.....	1
2	C 24741	HUB - clutch	1
3	C 26166	ARM - engaging	1
4	164- 40	SCREW - 5/16" - 18 x 3/4" flat head socket.....	2
5	193- 76	LOCK WASHER - 5/16" special external tooth	2
6	C 28677	WASHER - fan 17/32"	1
7	C 15515	WASHER - spring	6
8	C 15557	WASHER - spacer .050"	3
9	C 31045	KIT - pulley and disc assembly (includes item 19)	1
10	C 23740	KIT - friction disc.....	1
11	C 29735	BEARING - ball	3
12	C 32169	CAM - clutch.....	1
13	C 16786	SPRING - clutch load	2
14	129- 125	NUT-1/2,, N.F	1
15	C 23627	GUIDE - adjusting nut	1
16	C 23624	WASHER - spacer	1
17	C 23630	SPACER-hub	1
18	C 23625	NUT - adjust	1
19	C 29811	SPACER - washer .100".....	2
20	C 31018	CLEVIS - PTO brake	1
21	113- 3	BOLT- 1/4" - 20x 3/4"	2
22	131- 934	NUT - 1/4" - 20 flange lock	2
23	C 32168	CAM - clutch.....	1
24	C 29772	WRENCH - clutch adjust.....	1